 



USER INSTRUCTION

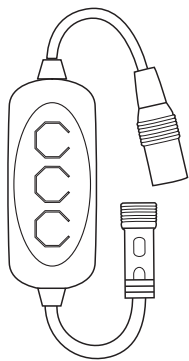


I .Product Parameter:

Category	LED Controller
Domination Principle	WIFI
APP	Surplife
Operation Platform	Android 7.0/IOS 12.0 or later
Input Voltage	DC(12-24)V
Supported Driver IC	SPI: Common RGBW, RGBW-TM1814, Common RGBCW, RGBCW-2805
Signal Output	Support one-wire driver IC, able to control up to 2048 pixels
Working Temperature	-20~+55°C
Control Distance	Visible distance 30M
Certification	CE, RoHS, FCC

 
II .Wire Connection

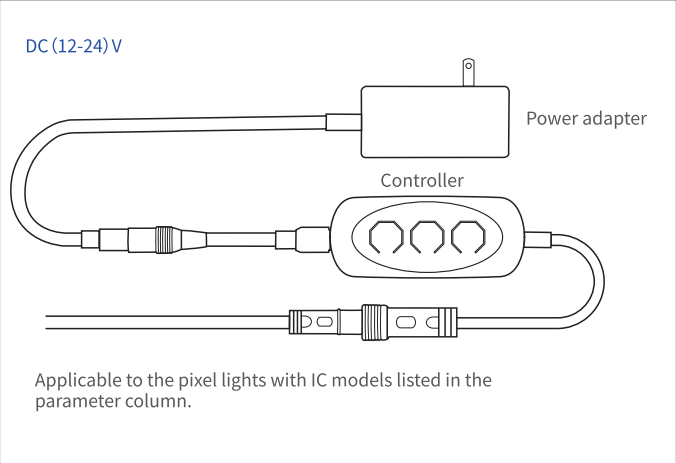

 
The connection between the controller and the power supply

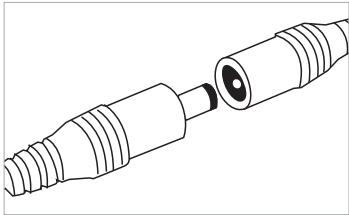

Controller and device connection

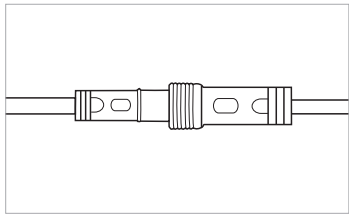 

III. Key Instruction

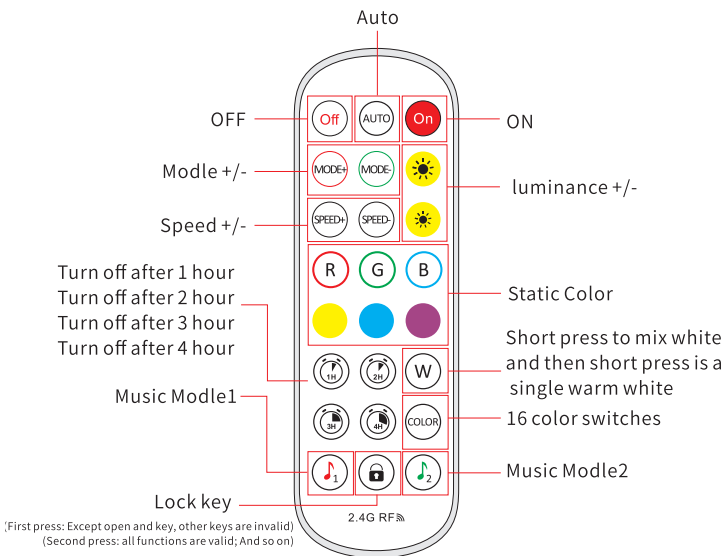 

IV. Download Surplife APP

Download “Surplife” APP from App store and Google Play Store, or scan the QR code.



Surplife APP



SPI RGBW

FAQ

Scan the " Instruction " QR code to read the electronic manual Or enter the APP FAQ to learn more .

V. How to connect the controller to Wi-Fi network?

1) Register/Login your Surplife account.

