


85x125mm

Wall Sconce
User Manual

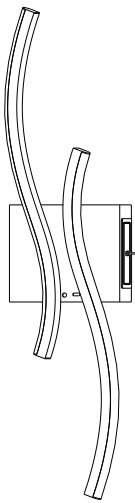


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




If you have any problems with your product or have any questions, please contact us through your order or our after-sales. we will solve the problem for you within 24 hours.

Remote Control Description

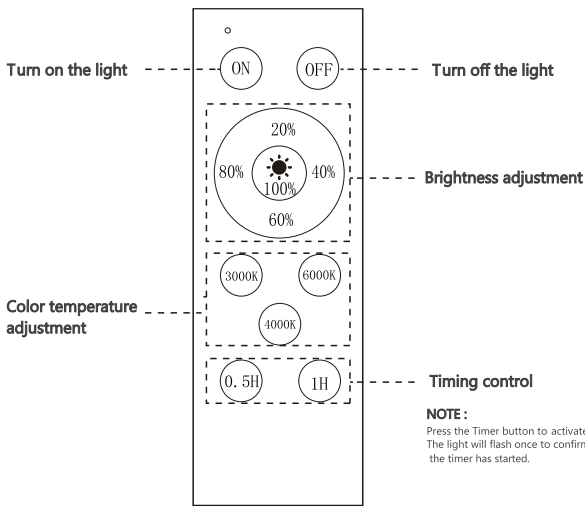


PRODUCT USAGE

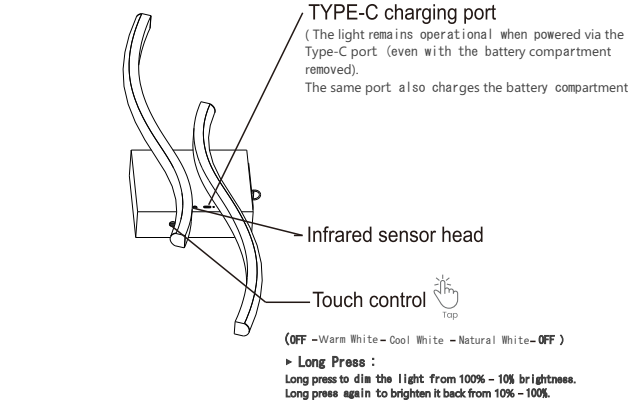


Press the "ON" button on the remote to turn on the light.
Ensure direct line of sight with the wall light's IR receiver (max 8m range).
The remote retains your last used lighting setting (color temperature/brightness). Removing the battery compartment resets the wall light to Warm White.

Single tap the wall light's touch button to switch on.
Default setting activates Warm White light (3000K), memory function.

- 1). Ensure clear line of sight between remote and receiver for optimal performance.
- 2). Interference may occur if multiple IR devices operate simultaneously in same area.
- 3). If the remote becomes unresponsive when pointed at the infrared receiver (and only works at reduced distances), consider replacing the batteries.

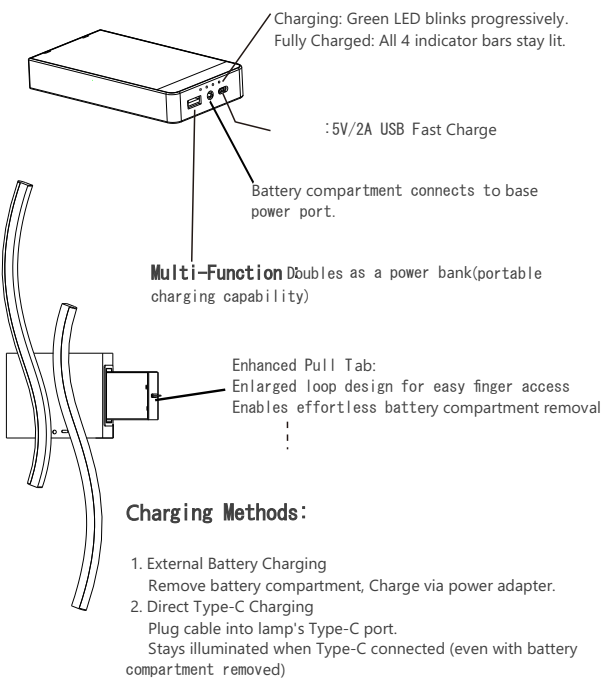

Please use a 5V/2A or lower specification charger.
Otherwise, the device will not respond.


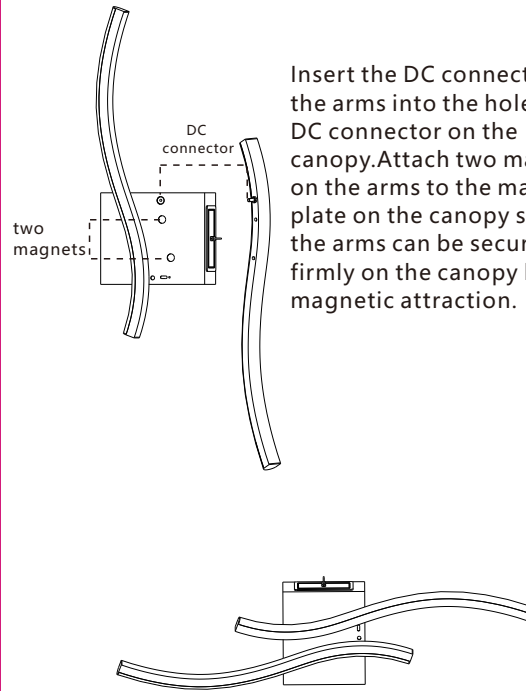


INSTALLATION STEPS

step 1:

Mounting Plate Preparation:
Ensure section ① inward bend.
Ensure Part ② maintains full wall contact (see diagram for correct positioning).

Secure Mounting Plate:
Mark & drill holes at designated points.
Insert white wall plugs into drilled holes.
Align plate holes and fasten with screws.

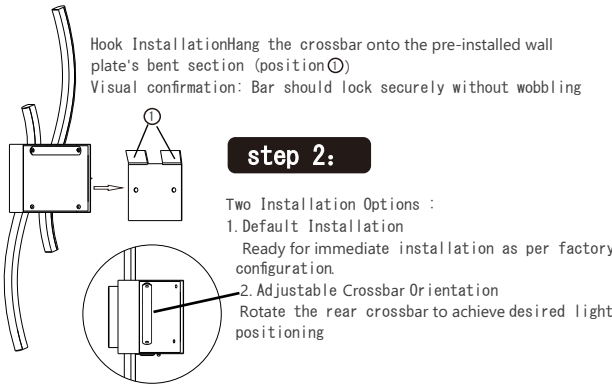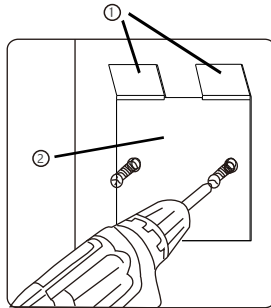

Product Parameter

Model Number	T3360BU
Lamp Material	Iron+Aluminium+PC
Lamp Bead Type	LED 2835
colour temperature	3000K-6000K
Battery Specification	3.7V 10000mAh
Light Source	LED 2835 5W
Control Mode	Infrared remote control