 


85x125mm

Wall Sconce  
User Manual

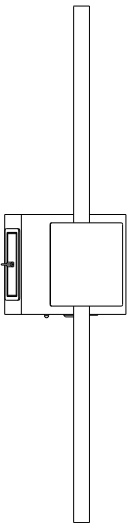


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




If you have any problems with your product or have any questions, please contact us through your order or our after-sales. we will solve the problem for you within 24 hours.

Remote Control Description

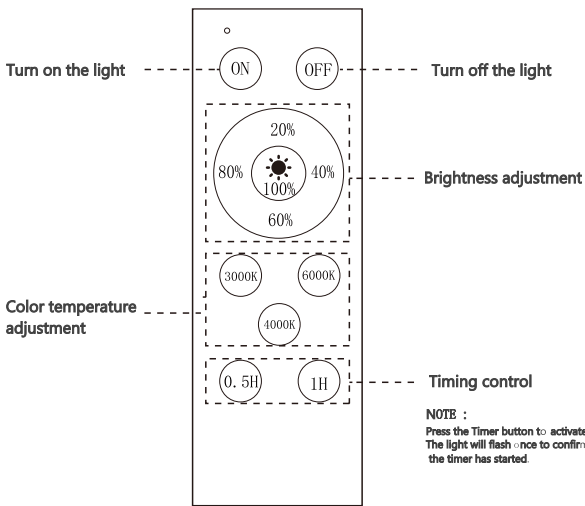


PRODUCT USAGE

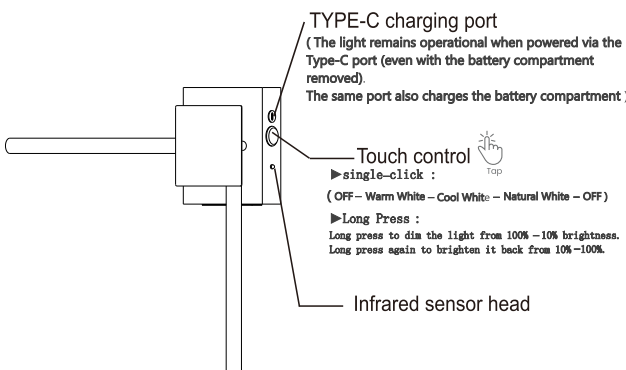

- Operation Methods:**
- 1.Remote Control:**  
Press the "ON" button on the remote to turn on the light.  
**Notes :** Ensure direct line of sight with the wall light's IR receiver (max 8m range).  
**Memory Function:** The remote retains your last used lighting setting (color temperature/brightness).Removing the battery compartment resets the wall light to Warm White
- 2.Touch Control:**  
Single tap the wall light's touch button to switch on.  
Default setting activates Warm White light (3000K). memory function

- Important Notes:**
- 1). Ensure clear line of sight between remote and receiver for optimal performance.
  - 2). Interference may occur if multiple IR devices operate simultaneously in same area.
  - 3). If the remote becomes unresponsive when pointed at the infrared receiver (and only works at reduced distances), consider replacing the batteries.

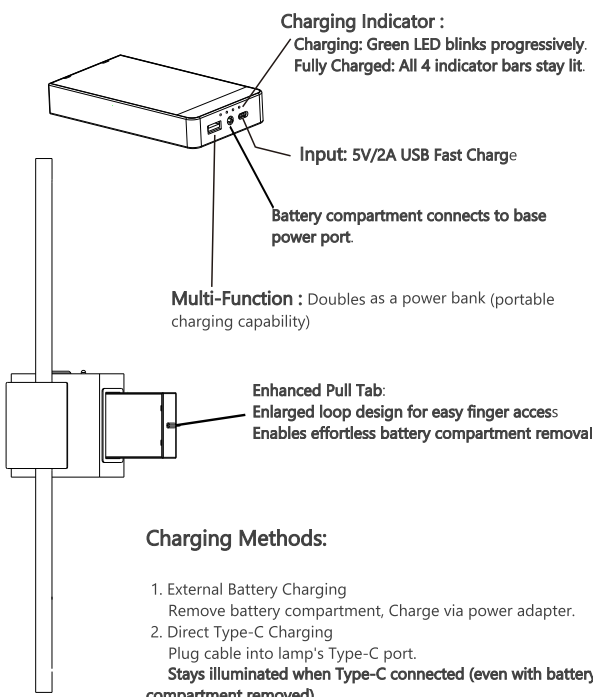

- Charging Methods:**
1. External Battery Charging  
Remove battery compartment, Charge via power adapter.
  2. Direct Type-C Charging  
Plug cable into lamp's Type-C port.  
Stays illuminated when Type-C connected (even with battery compartment removed)

Please use a 5V/2A or lower specification charger. Otherwise, the device will not respond.

INSTALLATION STEPS

step 1

**Mounting Plate Preparation :**  
Ensure section ① inward bend.  
Ensure Part ② maintains full wall contact (see diagram for correct positioning)

**Secure Mounting Plate :**  
Mark & drill holes at designated points.  
Insert white wall plugs into drilled holes.  
Align plate holes and fasten with screws.




**Hook Installation:**Hang the crossbar onto the pre-installed wall plate's bent section (position ①).  
**Visual confirmation:** Bar should lock securely without wobbling.

step 2


- Two Installation Options :**
1. Default Installation  
Ready for immediate installation as per factory configuration.
  - 2 Adjustable Crossbar Orientation  
Rotate the rear crossbar to achieve desired light positioning

**Custom Shape DIY:**  
Rotate the light column freely to create your desired lighting configuration. (360° adjustable design enables infinite shape possibilities)

Crossbar Default Installation

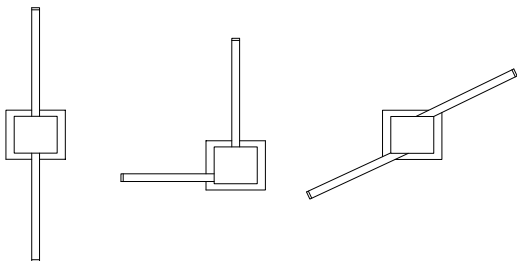

Crossbar Adjustment

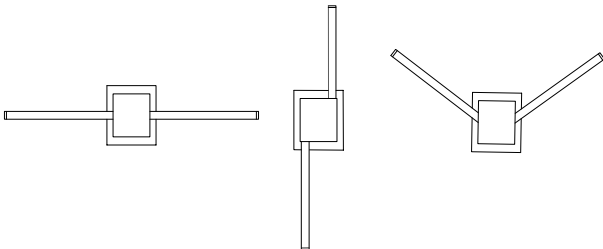

Product Parameter

|                       |                         |
|-----------------------|-------------------------|
| Model Number          | T3371BU                 |
| Lamp Material         | Iron+Aluminium+PC       |
| Lamp Bead Type        | LED 2835                |
| colour temperature    | 3000K-6000K             |
| Battery Specification | 3.7V 10000mAh           |
| Light Source          | LED 2835 5W             |
| Control Mode          | Infrared remote control |