

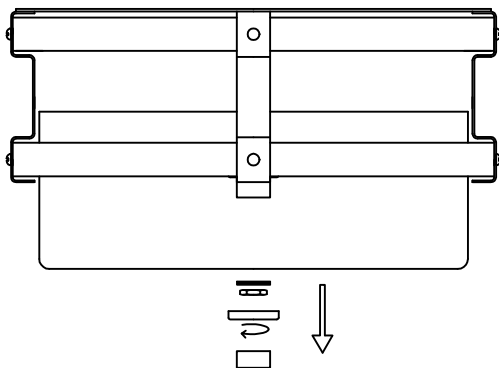



T7203-2CU-BK

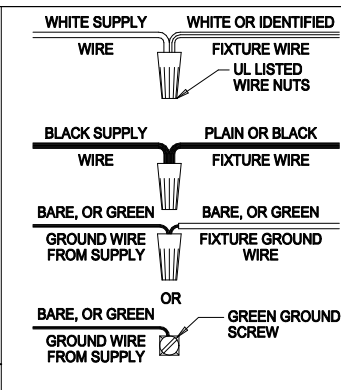


Loosen the hex nut and remove the glass

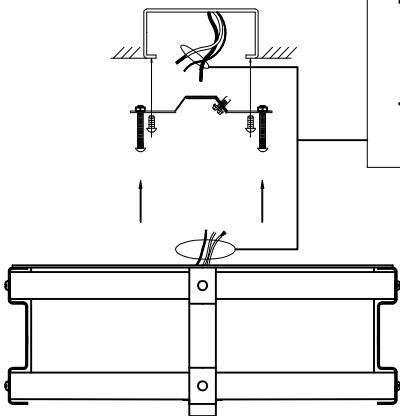

Connect the wire and install canopy

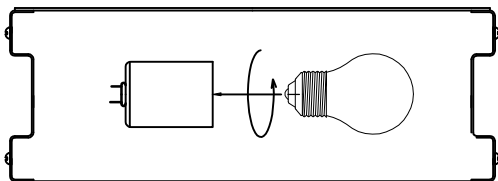

Install two bulbs

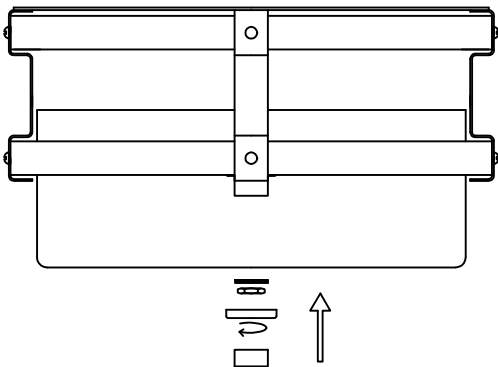

Install the glass by tightening the hex nut


HARDWARE REQUIRED



AA_Mounting Bracket_1



BB_Fixture Mounting Screw_4



DD_Wire Nut_3



EE_Hex Nut_2