




T7204-2CU-BK

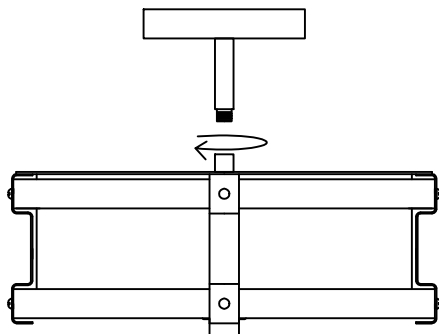

Install the canopy to body fixture

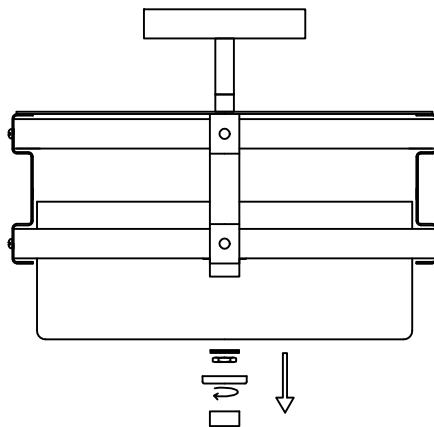


Loosen the hex nut and remove the glass

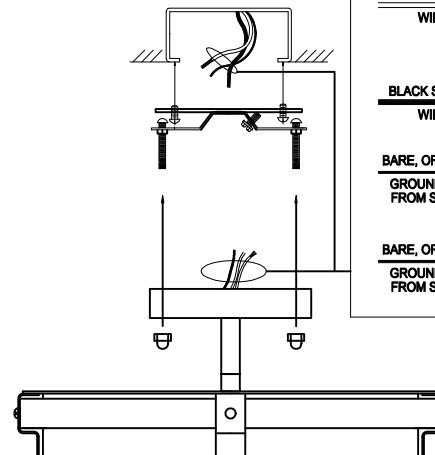


Connect the wire and install canopy

WHITE SUPPLY WIRE	WHITE OR IDENTIFIED FIXTURE WIRE
BLACK SUPPLY WIRE	PLAIN OR BLACK FIXTURE WIRE
BARE, OR GREEN GROUND WIRE FROM SUPPLY	BARE, OR GREEN FIXTURE GROUND WIRE
BARE, OR GREEN GROUND WIRE FROM SUPPLY	OR GREEN GROUND SCREW

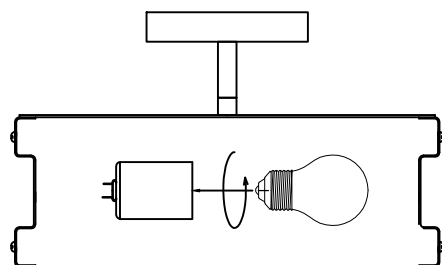


Install two bulbs

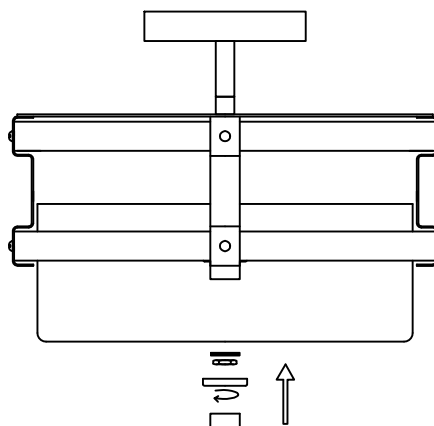

Install the glass by tightening the hex nut

HARDWARE REQUIRED

 AA_Mounting Bracket _1

 BB_Fixture Mounting Screw _4

 DD_Wire Nut _3

 EE_Hex Nut _2

 FF_Lock Nut _2