

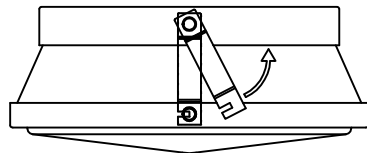




T7207-2CU-J

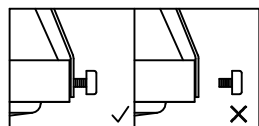


Loosen 3 bottom screws

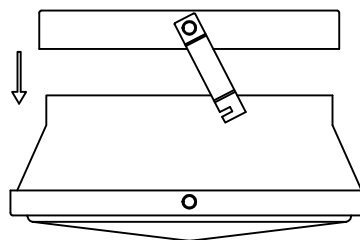



Remove the side bracket and glass

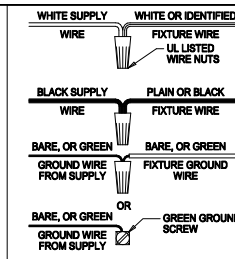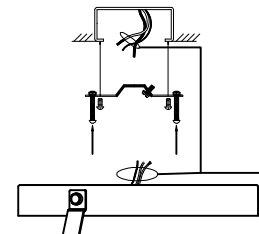


Connect the wire and install canopy

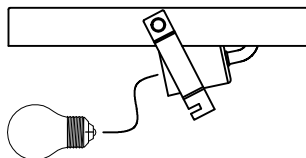

Install two bulbs

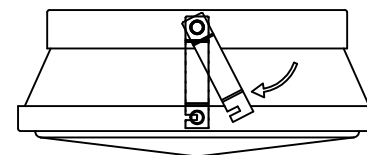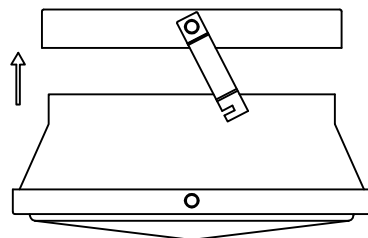

Align hole on side bracket with screw

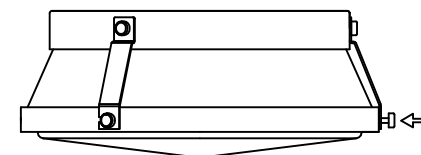

Tightening screws to secure glass to the fixture

HARDWARE REQUIRED

 AA_Mounting Bracket_1

 BB_Fixture Mounting Screw_4

 DD_Wire Nut_3

 EE_Hex Nut_2