

Model No: T3072BU-J-C


Installation without Junction Box-Plug In

ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Install the mounting plate (C) on the wall with the screws (D).
4. Wrap a few loops of the ground wire (E) around the green screw on the mounting plate (C) and then tighten the green screw.
5. Fix the canopy (F) to the mounting plate (C) with the ball nuts (G).
6. Attach the harp (H) to the bracket on the bottom of the lamp holder.
7. Screw the bulb (J) into the lamp holder.
8. Attach the lampshade (K) to the harp (H) using the nut (L) to secure.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

Used without junction box

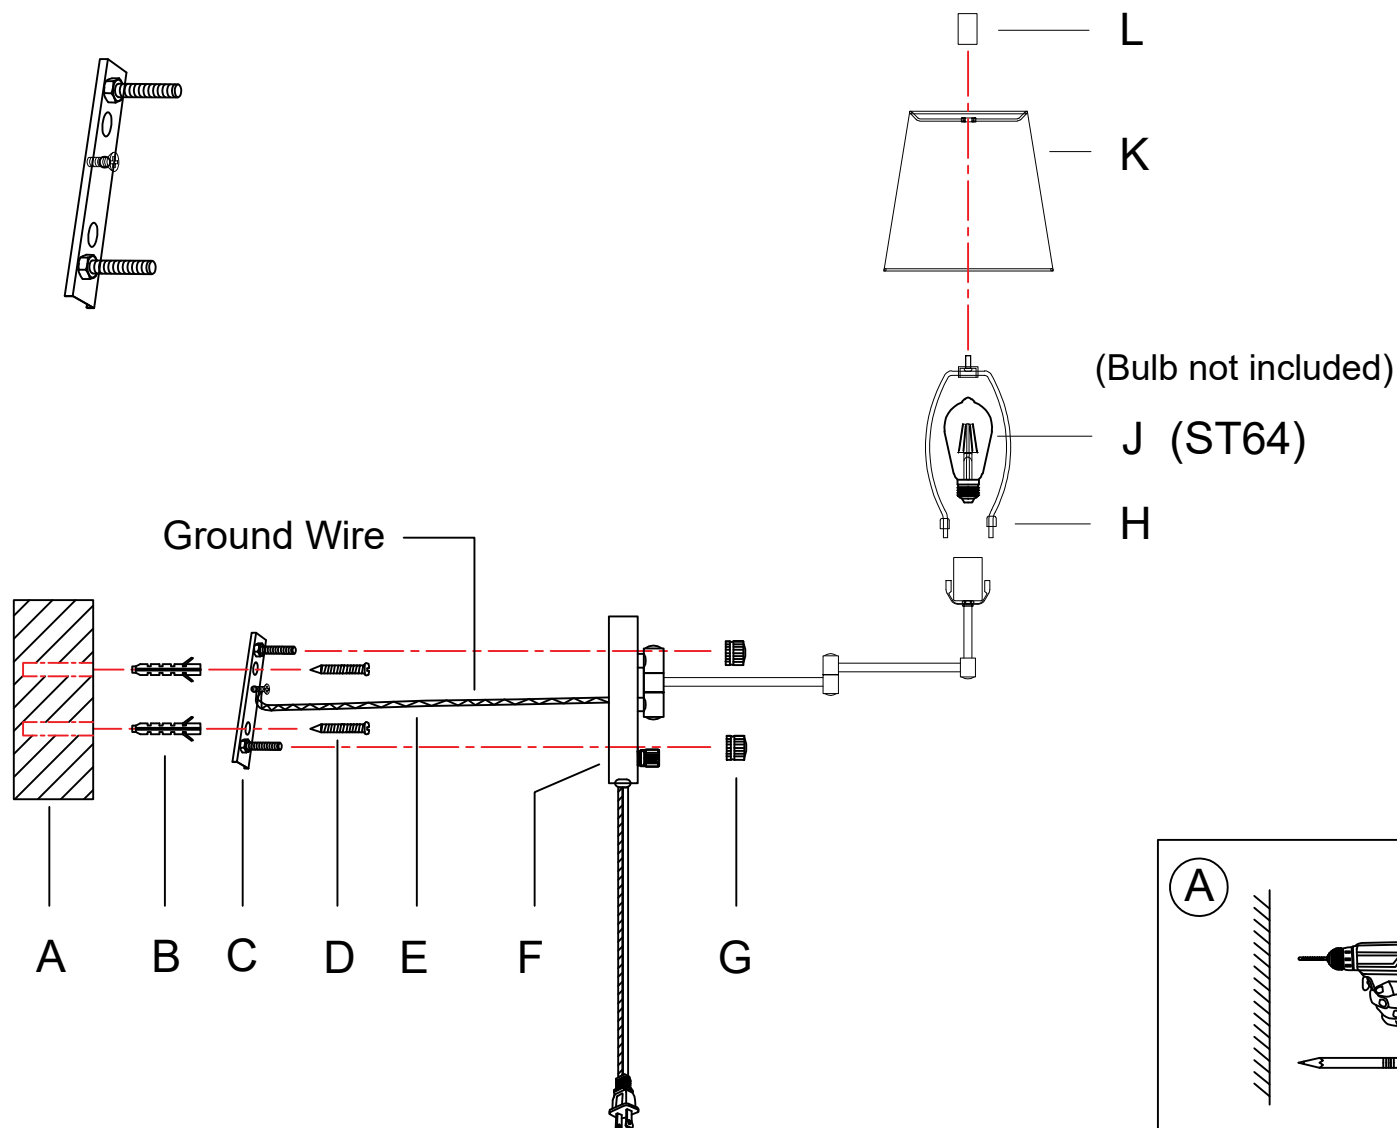

Note: The way to differ the live wire from the neutral wire is that there are parameters printed on the cover of the live wire while there is nothing on the neutral wire.

