



ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Attach the mounting plate (C) to the wall with self-tapping screws (D). Before tightening the self-tapping screws, wrap a few loops of the copper ground wire (E) around one of the screws (D), and tighten the screws to attach the ground wire to the mounting plate.
4. Fix the canopy (F) to the mounting plate (C) with the screws (G).
5. Put the lamp shade (H) around the lamp holder and secure the shade with the socket ring (J).
6. Screw the bulb (K) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

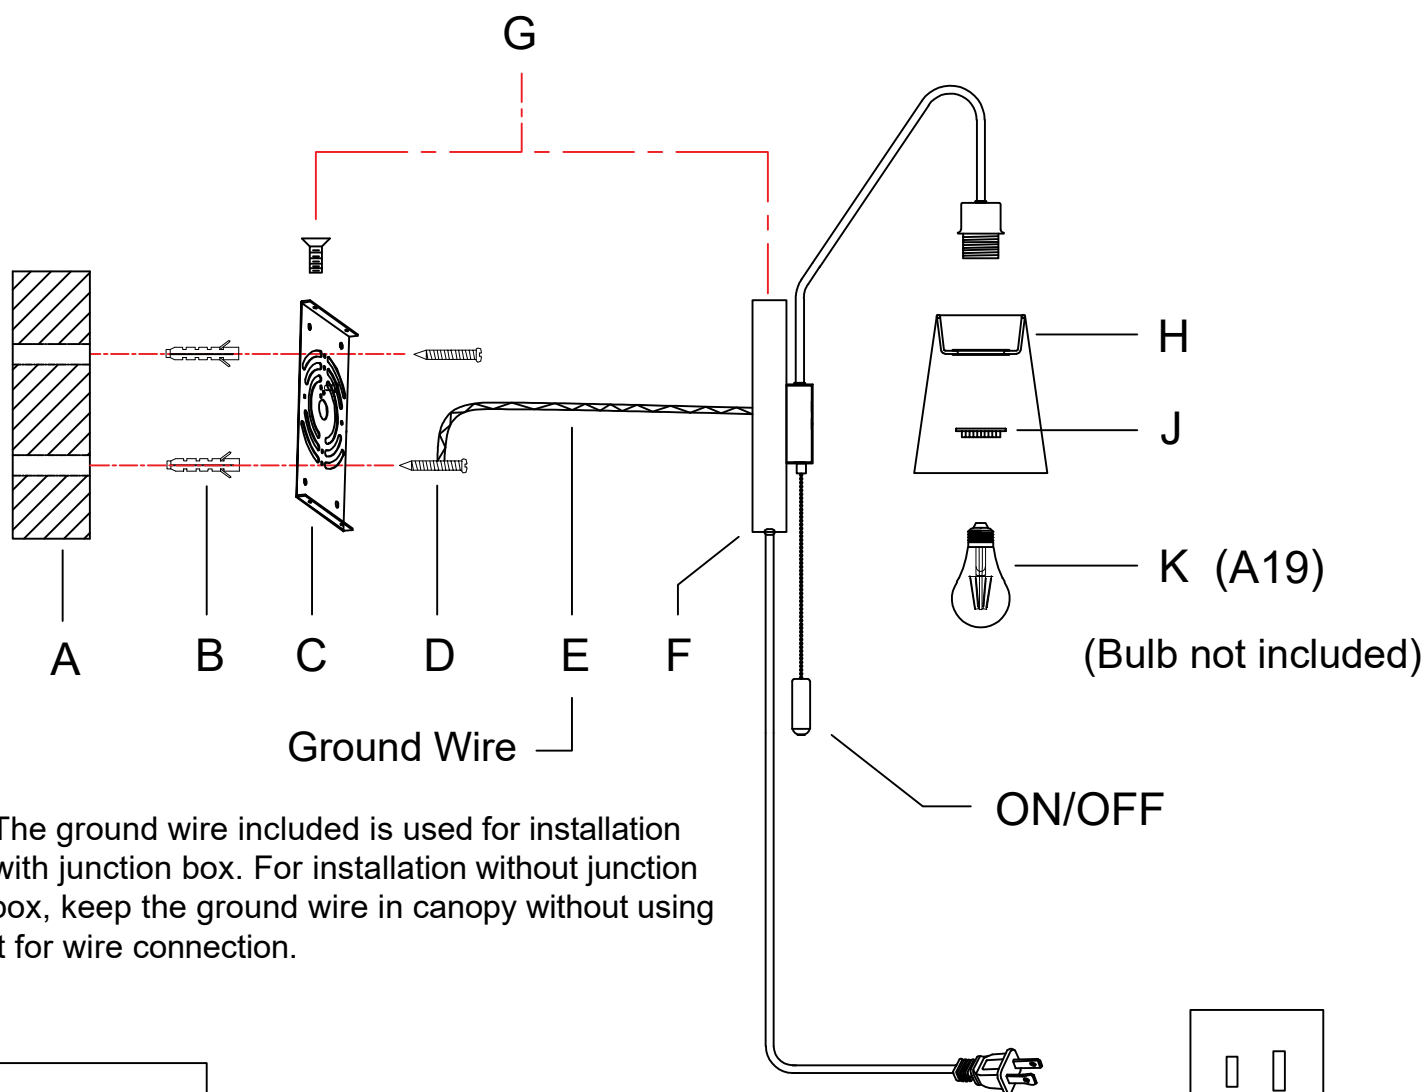

The ground wire included is used for installation with junction box. For installation without junction box, keep the ground wire in canopy without using it for wire connection.

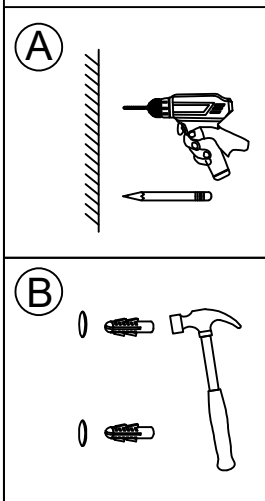

Note: The way to differ the live wire from the neutral wire is that there are parameters printed on the cover of the live wire while there is nothing on the neutral wire.