





Model No: T3373BU-C

Installation without Junction Box-Plug In

ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Install the mounting plate (C) on the wall with the screws (D).
4. Fix the canopy (E) to the mounting plate (C) with the screws (F).
5. Screw the bulb (G) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

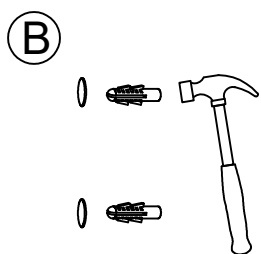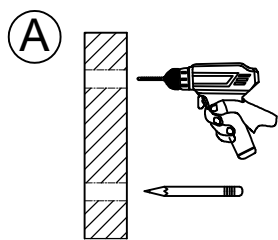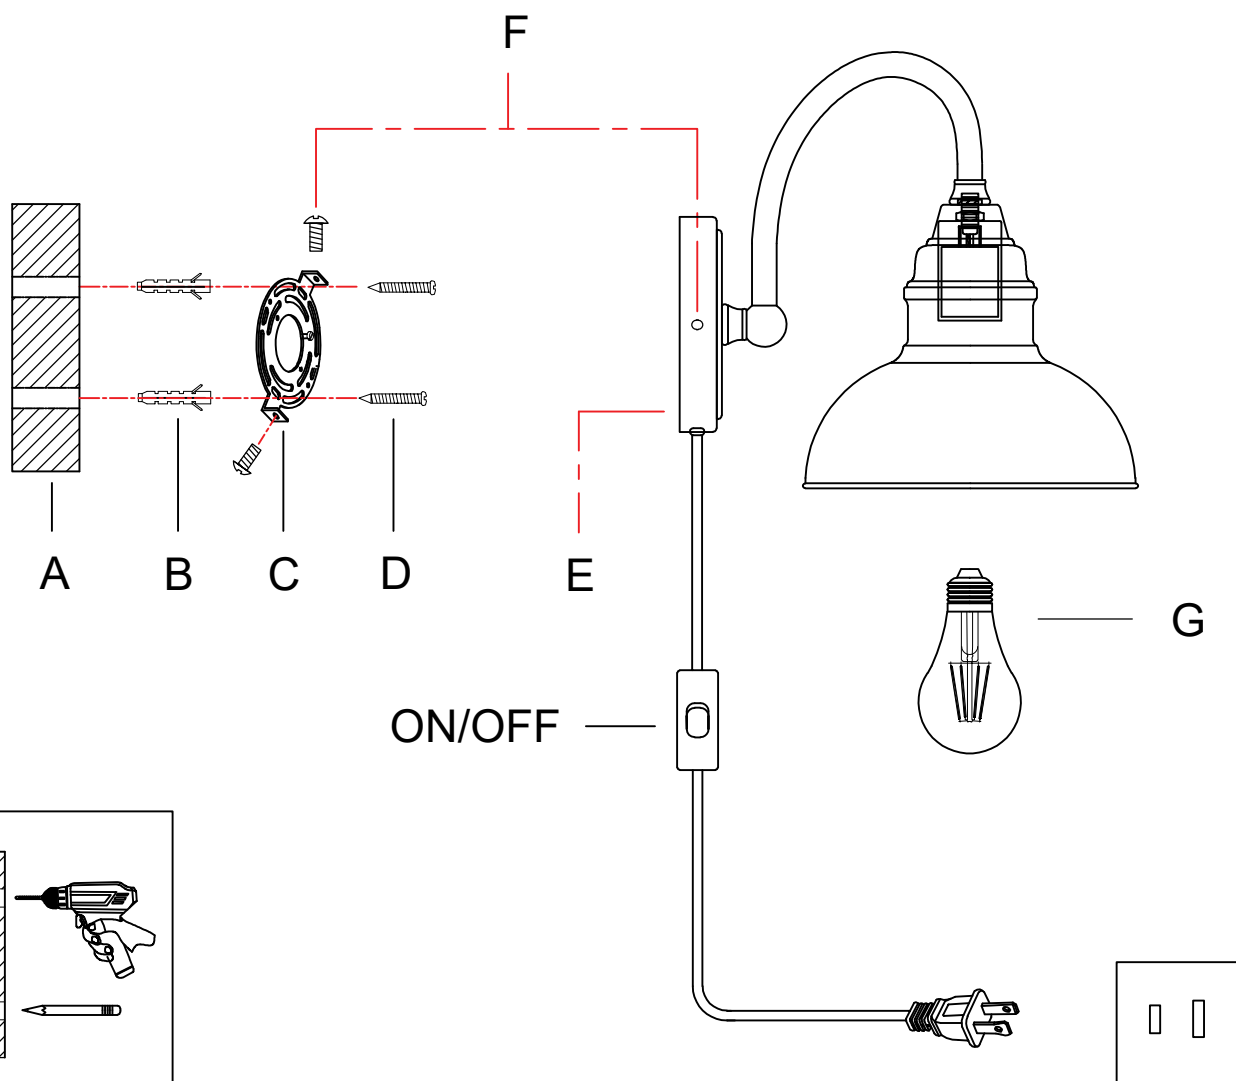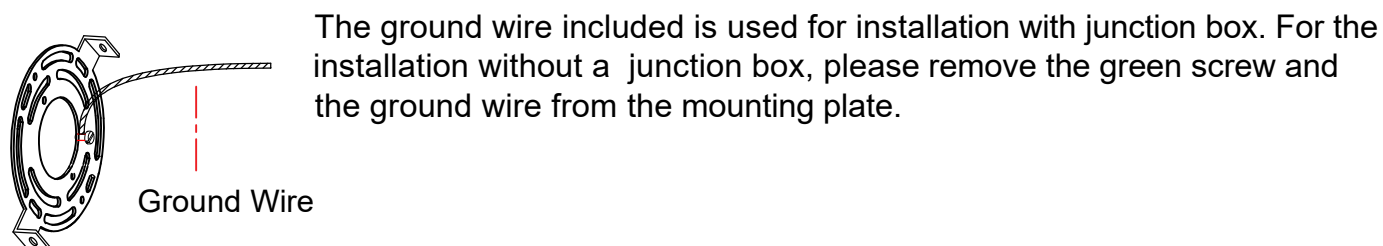

Note: The way to differ the live wire from the neutral wire is that there are parameters printed on the cover of the live wire while there is nothing on the neutral wire.