


Model No: T5387-3DU-BK

ASSEMBLY INSTRUCTIONS

1. Screw the rod (B) into the joint nut on the break (A).
2. Open the screwgates of carabiners on the chain (C) and connect the carabiners with the screw collar loop on the hanging rod (B) and that on the canopy (D).
3. Install the mounting plate (E) on the outlet box with the screws (F).
4. Loosen the hex nut around the bolts (G) and screw in or unscrew the bolts from the junction box to get the right length for installation.
5. Connect the fixture wire to the circuit wire with the wire nuts (H): live wire (L) (parameters printed on wire cover) with live wire, neutral wire (N) (nothing printed on wire cover) with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
6. Fix the canopy (D) to the mounting plate (E) with the ball nuts (J).
7. Put the lampshade (K) around the lamp holder and secure the shade with the socket ring (L).
8. Screw the bulb (M) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

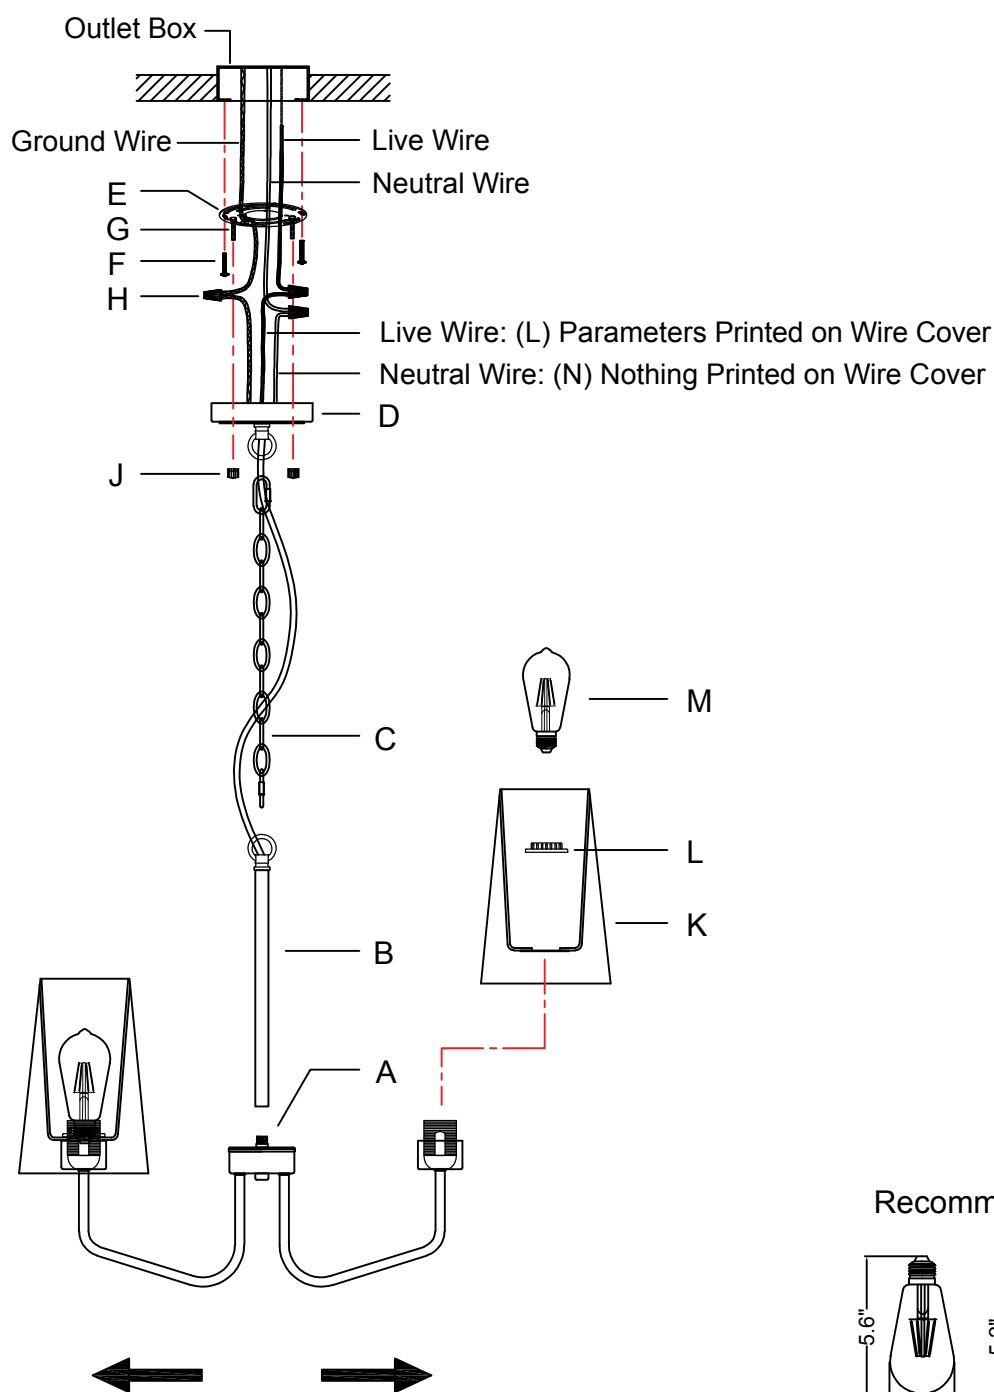

Adjust the distance among the arms so that the distance among the arms is almost the same.

Recommended bulb shape

