



Model No: B7286-3CU-G

ASSEMBLY INSTRUCTIONS

1. Screw the connecting rod (A) into the threaded tube attached to the lamp holder (B).
 2. Pass the wires through the connecting rod (C) and screw the connecting rod into the threaded tube attached to the lamp holder (B). Then pass the wires through the canopy and screw the canopy (D) into the connecting rod (C).
 3. Install the mounting plate (E) on the outlet box by using the screws (F).
 4. Loosen the hex nuts around the bolts (G) and screw in or unscrew the bolts from the junction box to get the right length for installation.
 5. Connect the fixture wire to the circuit wire with the wire nuts (H): black wire with live wire, white wire with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
 6. Fix the canopy (D) to the mounting plate (E) with the ball nuts (J).
 7. Screw the bulb (K) into the lamp holder.
 8. Put the lampshade (L) around the connecting rod (A) using the nuts (M) to secure.
- Please consult a qualified Electrician if you are not familiar with electrical wiring.*

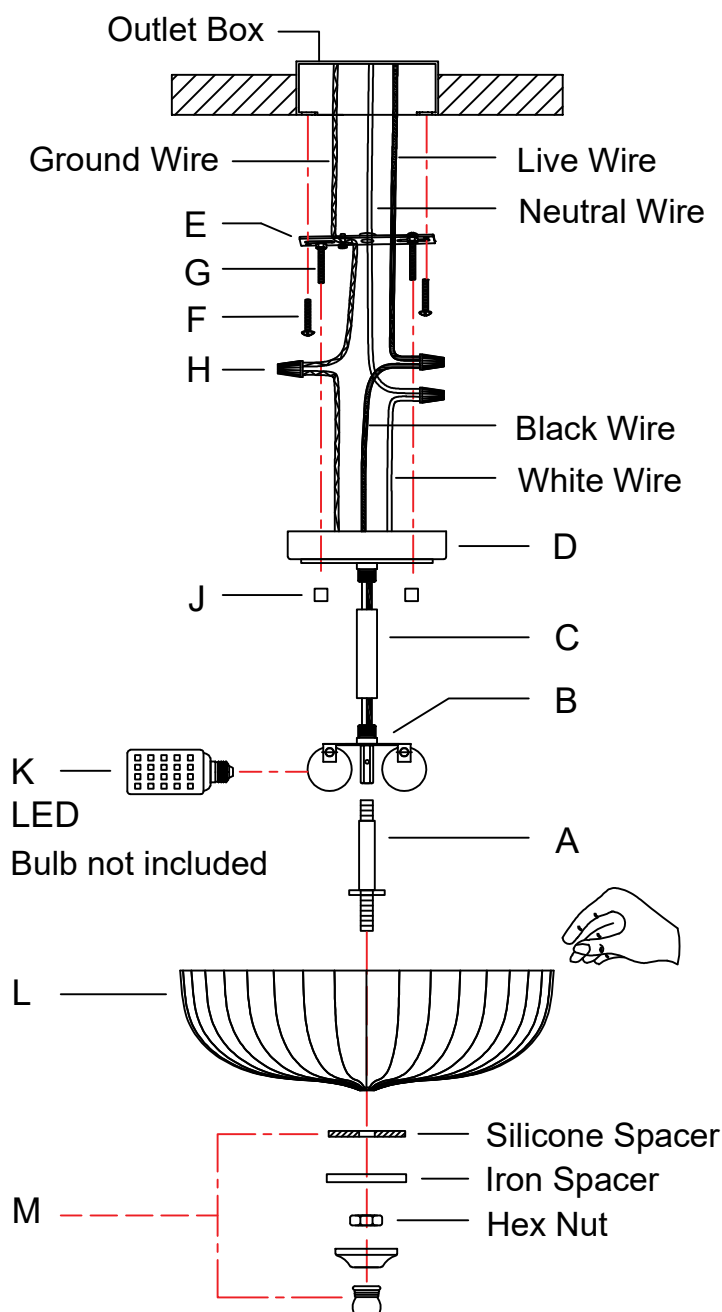

Recommended bulb shape

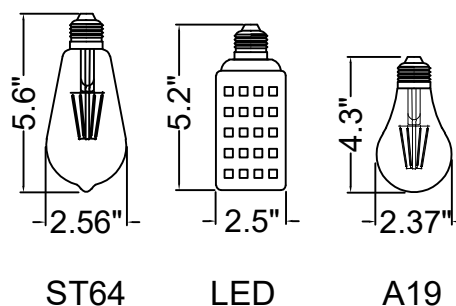

NOTE: Please hold the glass shade with your hand when installing or removing the glass shade otherwise the glass shade may fall down since the shade is heavy.