


ITEM NO. :T3243BU-BN-C

ASSEMBLY INSTRUCTIONS

- 1.Install the mounting plate (A) on the outlet box by using the screws (B).
- 2.Connect the fixture wire to the circuit wire by wire nuts (C), black wire with live wire, white wire with neutral wire, ground wire with ground wire.
- 3.Fix the lamp body (D) to the mounting plate (A) with the ball nuts (E).
- 4.Place the lamp shade (F) on the socket and tighten it with the socket ring (G).
- 5.Screw the bulb (H) into the lamp holder.


Please consult a qualified Electrician if you are not familiar with electrical wiring.

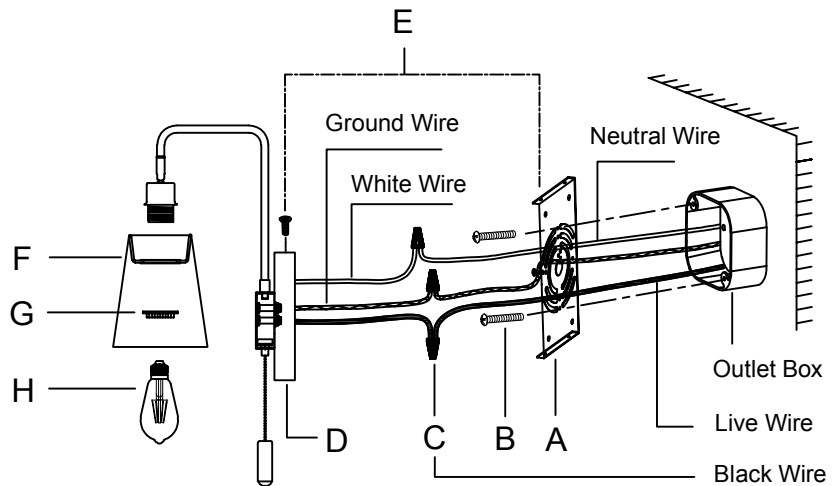

Installation Process With a Junction Box

Installation Process Without a Junction Box

- 1.Drill holes on the wall according to size of drywall anchors and gently tap the plastic drywall anchors (A) into the hole with a hammer.
- 2.Align the holes on the mounting plate with those on the wall. Drill a deep hole for the green screw securing the ground wire (E).
- 3.Attach the the mounting plate (B) to the wall and secure it with self-tapping screws (C).
- 4.Wrap a few loops of the ground wire (E) around the green screw tightly.
- 5.Pass the power cord (D) through the hole on the canopy and fasten the cord with an 8-shaped fastener. Connect the fixture wire to the circuit wire with wire nuts, black wire with live wire (L) and white wire with neutral wire (N).

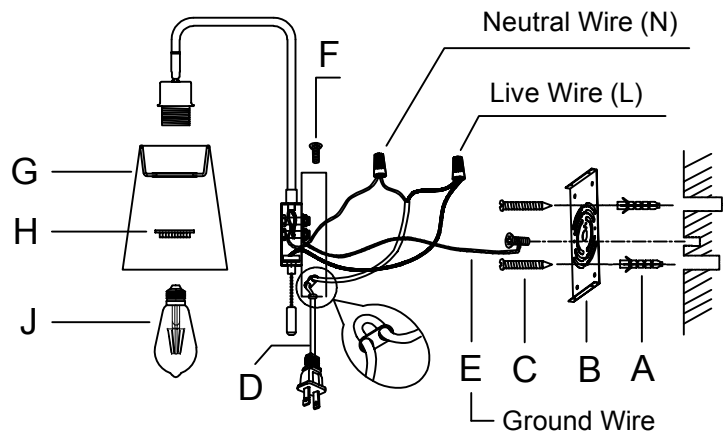

Note: The way to differ the negative wire from the live wire is that a white line is printed on the cover of the negative wire.