
ITEM NO.: T7214-3CU

ASSEMBLY INSTRUCTIONS

- 1.Attach the lamp holder (A) to the installation hole on the lampshade (B) using a nut (C) to secure.
- 2.Pass the wires through the connecting rod (D), screw the connecting rod into the joint connector nut (C), and and screw the canopy (E) into the rod.
- 3.Install the mounting plate (F) on the outlet box with the screws (G).
- 4.Loosen the hex nuts around the bolts (H) and screw in or unscrew the bolts from the junction box to get the right length for installation.
- 5. Connect the fixture wire to the circuit wire by wire nuts (J), black wire with live wire, white wire with neutral wire, ground wire with ground wire.
- 6. Fix the lamp body (E) to the mounting plate (F) with the ball nuts (K).
- 7. Screw the bulb (L) into the lamp holder.
- 8. Put the diffuser (M) into the lampshade slantwise at 15 to 25 degrees of angle.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

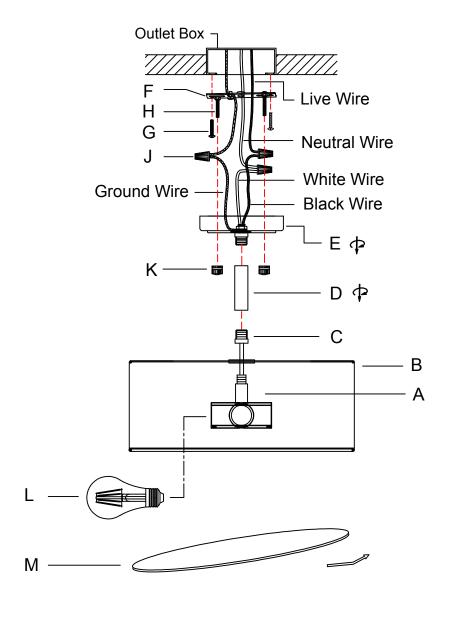

Do not overly bend the diffuser so as not to break it.

Recommended bulb shape

