


# ITEM NO : B7239-9CU

## ASSEMBLY INSTRUCTIONS

1. Attach the short arm (B) to the position (B) on the canopy (A) and secure the arm with the nut (C).
2. Attach the long arm (D) to the position (D) on the canopy (A) and secure the arm with the nut (C).
3. Attach the short arm (E) to the position (E) on the canopy (A) and secure the arm with the nut (C).
4. Connect the wires (F) of 9 lamp holders and divide them into two groups (4/5 lamp holders in a group): black wire with black wire and white wire with white wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
5. Install the mounting plate (G) on the outlet box with the screws (H).
6. Connect the fixture wire to the mains wire with the wire nuts (J), black wire with live wire, white wire with neutral wire, ground wire with ground wire.
7. Fix the lamp body (A) to the mounting plate (G) by the ball nuts (K).
8. Screw the bulb (L) into the lamp holder.
9. Screw the lampshade (M) into the lamp holder gently.

*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

### Recommended bulb shape

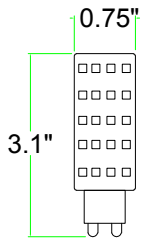

Max. Size of Bulb:  
0.75" Wide \* 3.1" High

### Positions of Holes on the Canopy

