


ITEM NO. :T3245BU-BN5-C

ASSEMBLY INSTRUCTIONS

1. Install the mounting plate (A) on the outlet box by using the screws (B).
2. Connect the fixture wire to the **circuit wire** by wire nuts (C), black wire with live wire, white wire with **neutral** wire, ground wire with ground wire.
3. Fix the lamp body (D) to the mounting plate (A) with the ball nuts (E).
4. Place the lamp shade (F) on the socket and tighten it with the socket ring (G).
5. Screw the bulb (H) into the lamp holder.


Please consult a qualified Electrician if you are not familiar with electrical wiring.

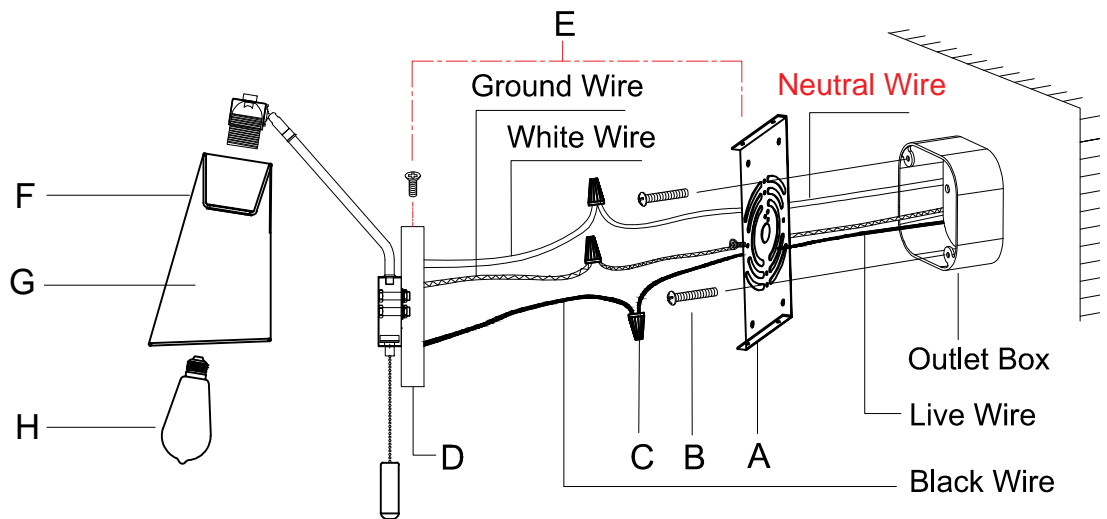

Installation Process With a Junction Box

Installation Process Without a Junction Box

1. Drill holes on the wall according to size of drywall anchors and gently tap the plastic drywall anchors (A) into the hole with a hammer.
2. Align the holes on the mounting plate with those on the wall. Drill a deep hole for the green screw securing the ground wire (E).
3. Attach the the mounting plate (B) to the wall and secure it with self-tapping screws (C).
4. Wrap a few loops of the ground wire (E) around the green screw tightly.
5. Pass the power cord (D) through the hole on the canopy and fasten the cord with an 8-shaped fastener. Connect the fixture wire to the mains wire with wire nuts, black wire with live wire (L) and white wire with **neutral** wire (N).

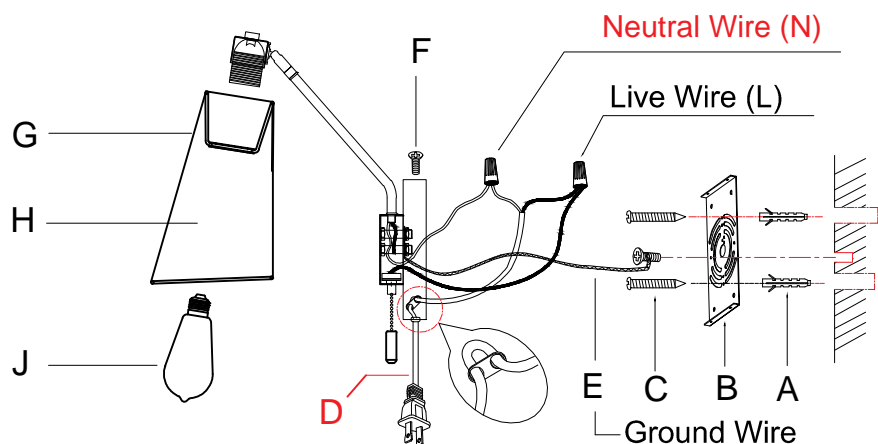

Note: The way to differ the negative wire from the live wire is that a white line is printed on the cover of the negative wire.