


# ITEM NO. :B3097BU-J-C ASSEMBLY INSTRUCTIONS

## Installation Process Without a Junction Box

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Attach the the mounting plate (C) to the wall and secure it with self-tapping screws (D).
4. Pass the power cords (E) through the hole on the canopy, adjust the length of cords, and fasten the cords with an 8-shaped fastener.
5. Connecting the power cords (F): black wire with live wire (L), white wire with neutral wire (N). Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
6. Wrap a few loops of the ground wire (G) around the green screw on the mounting plate (C) and then tighten the green screw.
7. Attach the lamp body (H) to the mounting plate (C) using the ball nuts (J) to secure.
8. Screw the bulb (K) into the lamp holder.
9. Screw the lampshade (L) into the lamp holder gently.

*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

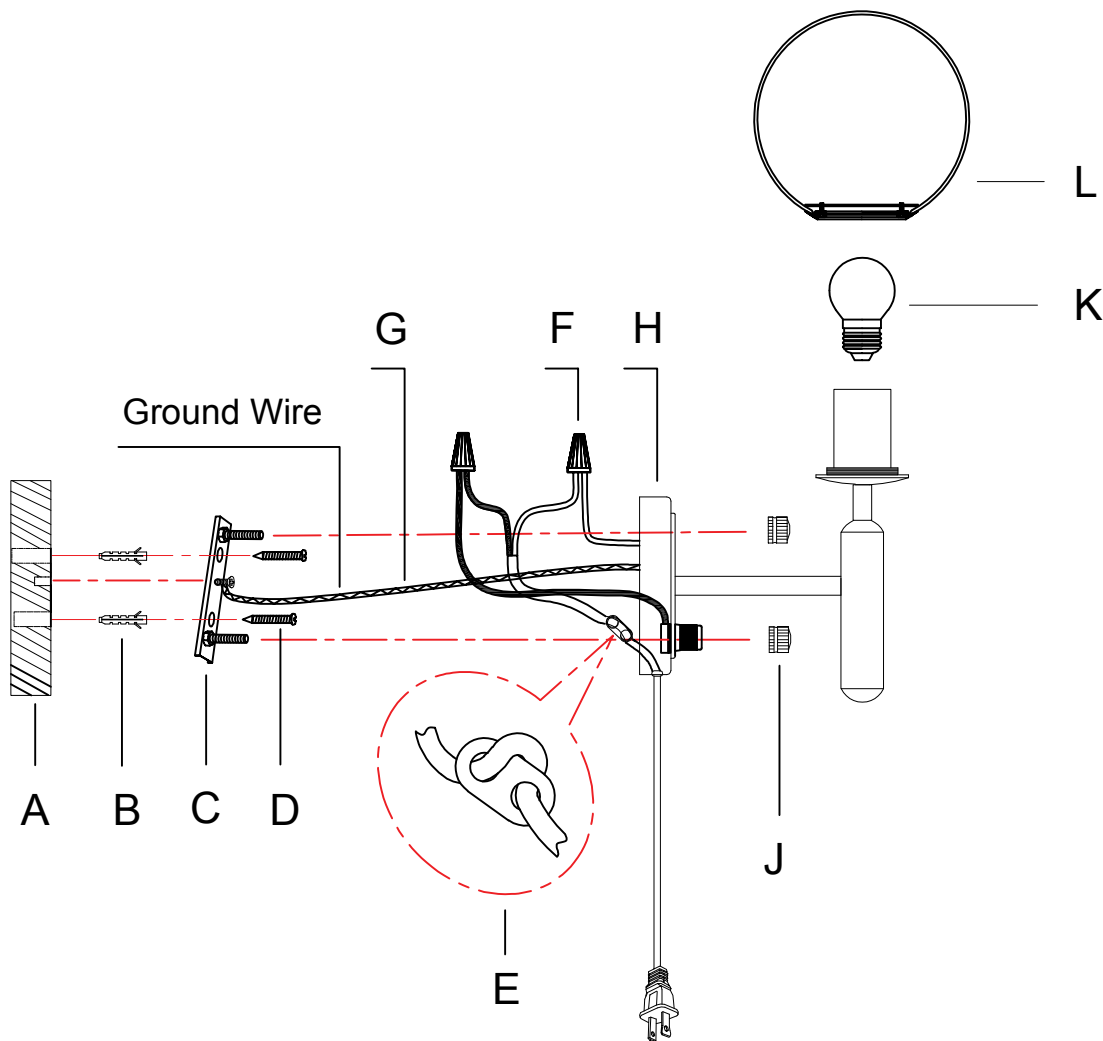

The dimmer is applicable for incandescent bulbs and halogen bulbs.

Note: The way to differ live wire (L) from negative wire (N) is a letter L is printed on the cover of live wire while there is nothing on negative wire.

