


ITEM NO. :B3097BU-C

ASSEMBLY INSTRUCTIONS

Installation Process Without a Junction Box

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Attach the the mounting plate (C) to the wall and secure it with self-tapping screws (D).
4. Pass the power cords (E) through the hole on the canopy, adjust the length of cords, and fasten the cords with an 8-shaped fastener.
5. Connecting the wires of plug-in cord (F): connect the black fixture wire to the live wire (L) of the plug-in cord and connect the white fixture wire to the neutral wire (N) of the plug-in cord with the wire nuts. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
6. Wrap a few loops of the ground wire (G) around the green screw on the mounting plate (C) and then tighten the green screw.
7. Attach the lamp body (H) to the mounting plate (C) using the ball nuts (J) to secure.
8. Screw the bulb (K) into the lamp holder.
9. Screw the lampshade (L) into the lamp holder gently.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

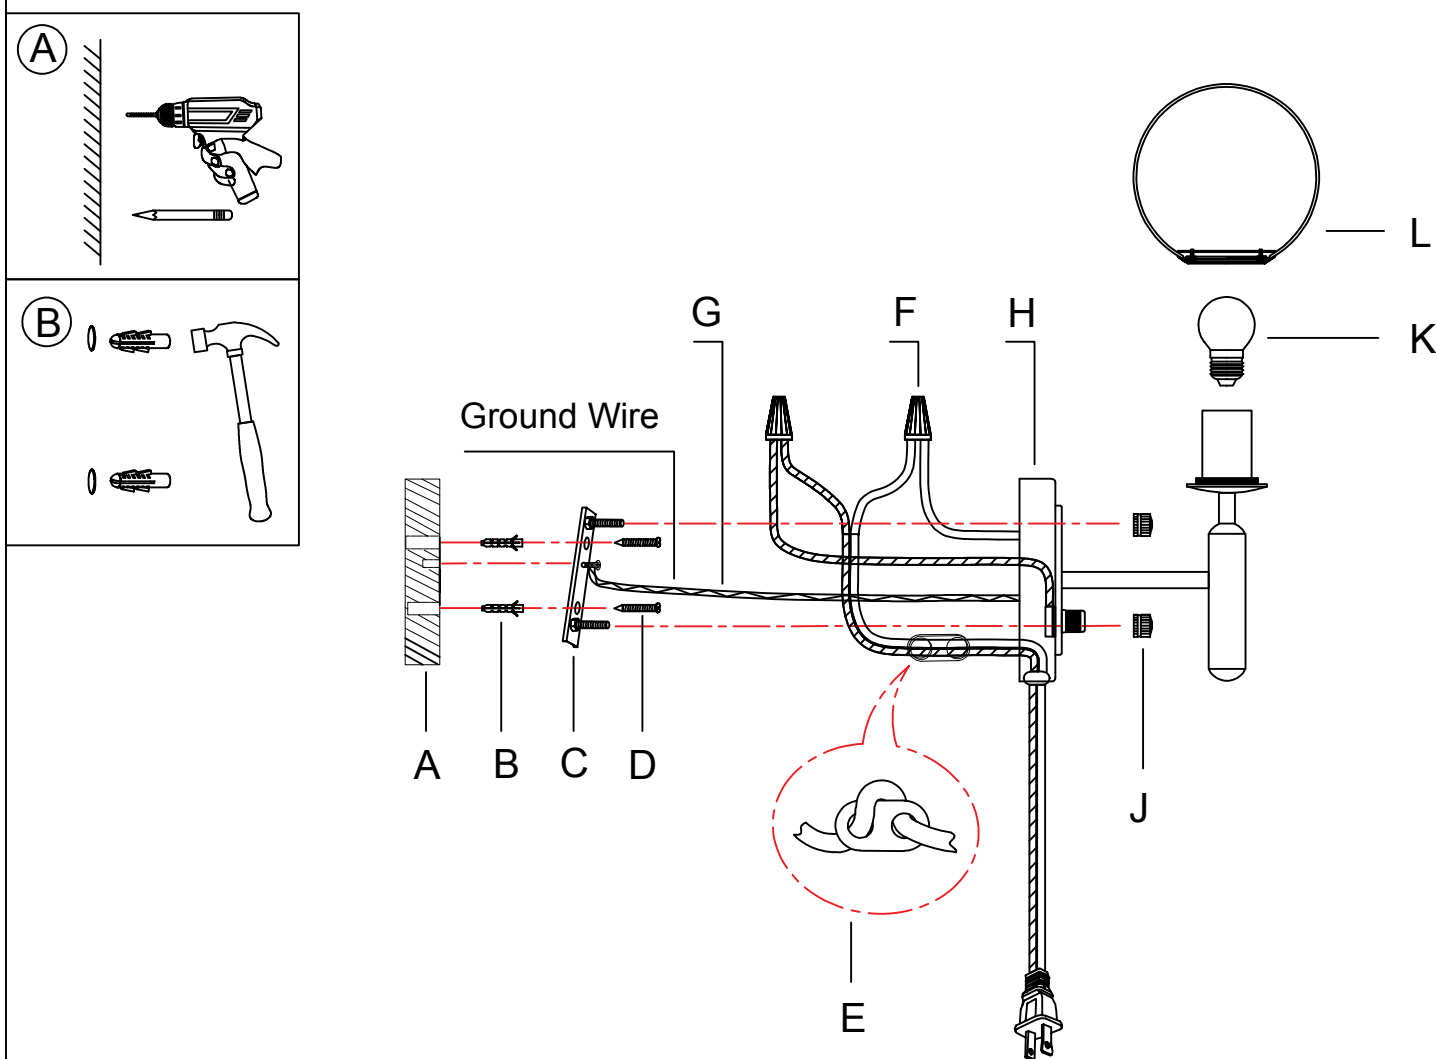

The dimmer is applicable for incandescent bulbs and halogen bulbs.

Note: The way to differ the live wire from the neutral wire is that there are parameters printed on the cover of the live wire while there is nothing on the neutral wire.