



Model No: B3084BU-BK-C

Installation without Junction Box-Plug In

ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Install the mounting plate (C) on the wall with the screws (D).
4. Wrap a few loops of the ground wire (E) around the green screw on the mounting plate (C) and then tighten the green screw.
5. Fix the canopy (F) to the mounting plate (C) with the ball nuts (G).
6. Screw the bulb (H) into the lamp holder.
7. Screw the lampshade (J) into the lamp holder gently.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

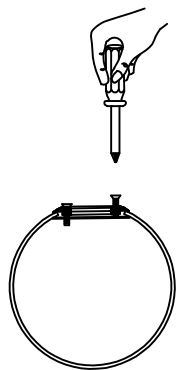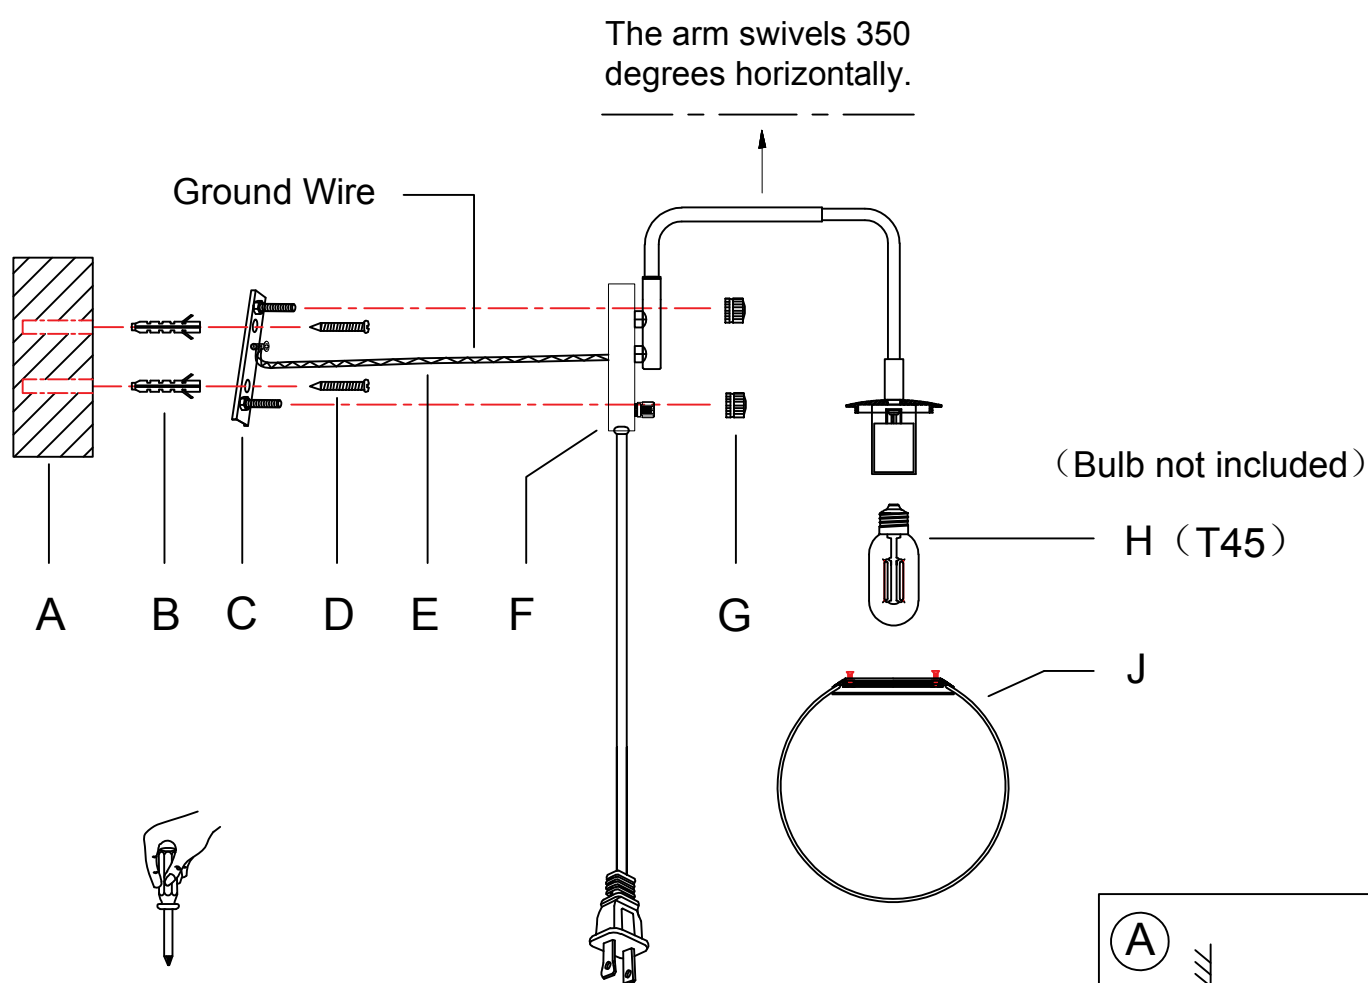

Tighten the screws before installing the glass globe. Note: Do not over tighten the screws or you will potentially break the glass.

Used without junction box

