


# Model No: T3062BU-BK-C

## ASSEMBLY INSTRUCTIONS

### Installation without Junction Box-Plug In

- 1.Pull the excessive power cord back into the canopy, screw off the tiny hex bolts on the swing arm, insert the gold rod (A) into the swing arm, adjust the lamp holder to a vertical direction, and secure the gold rod by tightening the tiny hex bolts with the hex key wrench (B).
- 2.Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (C).
- 3.Gently tap the plastic drywall anchors (D) into the hole with a hammer.
- 4.Install the mounting plate (E) on the wall with the screws (F).
- 5.Wrap a few loops of the ground wire (G) around the green screw on the mounting plate (E) and then tighten the green screw.
- 6.Fix the canopy (H) to the mounting plate (E) with the ball nuts (J).
- 7.Put the lamp shade (K) around the lamp holder and secure the shade with the socket ring (L).
- 8.Screw the bulb (M) into the lamp holder.

*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

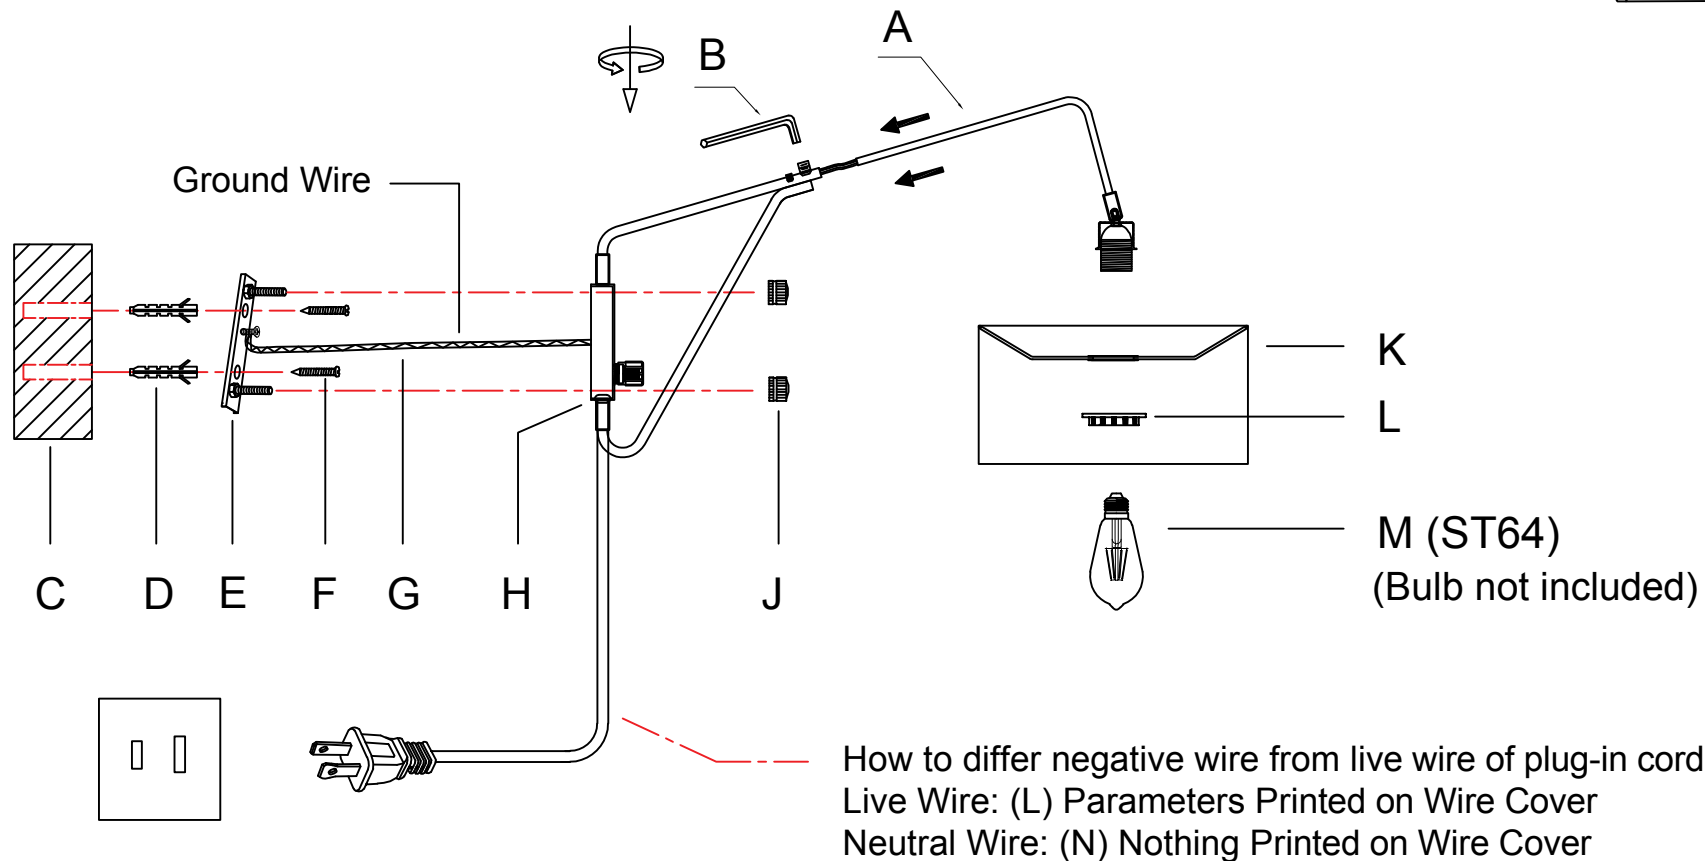

Hex Key Wrench



Tiny Hex Bolts

