


## ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Attach the mounting plate (C) to the wall with self-tapping screws (D). Before tightening the self-tapping screws, wrap a few loops of the copper ground wire (E) around one of the screws (D), and tighten the screws to attach the ground wire to the mounting plate.
4. Fix the canopy (F) to the mounting plate (C) with the screws (G).
5. Put the lamp shade (H) around the lamp holder and secure the shade with the socket ring (J).
6. Screw the bulb (K) into the lamp holder.



*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

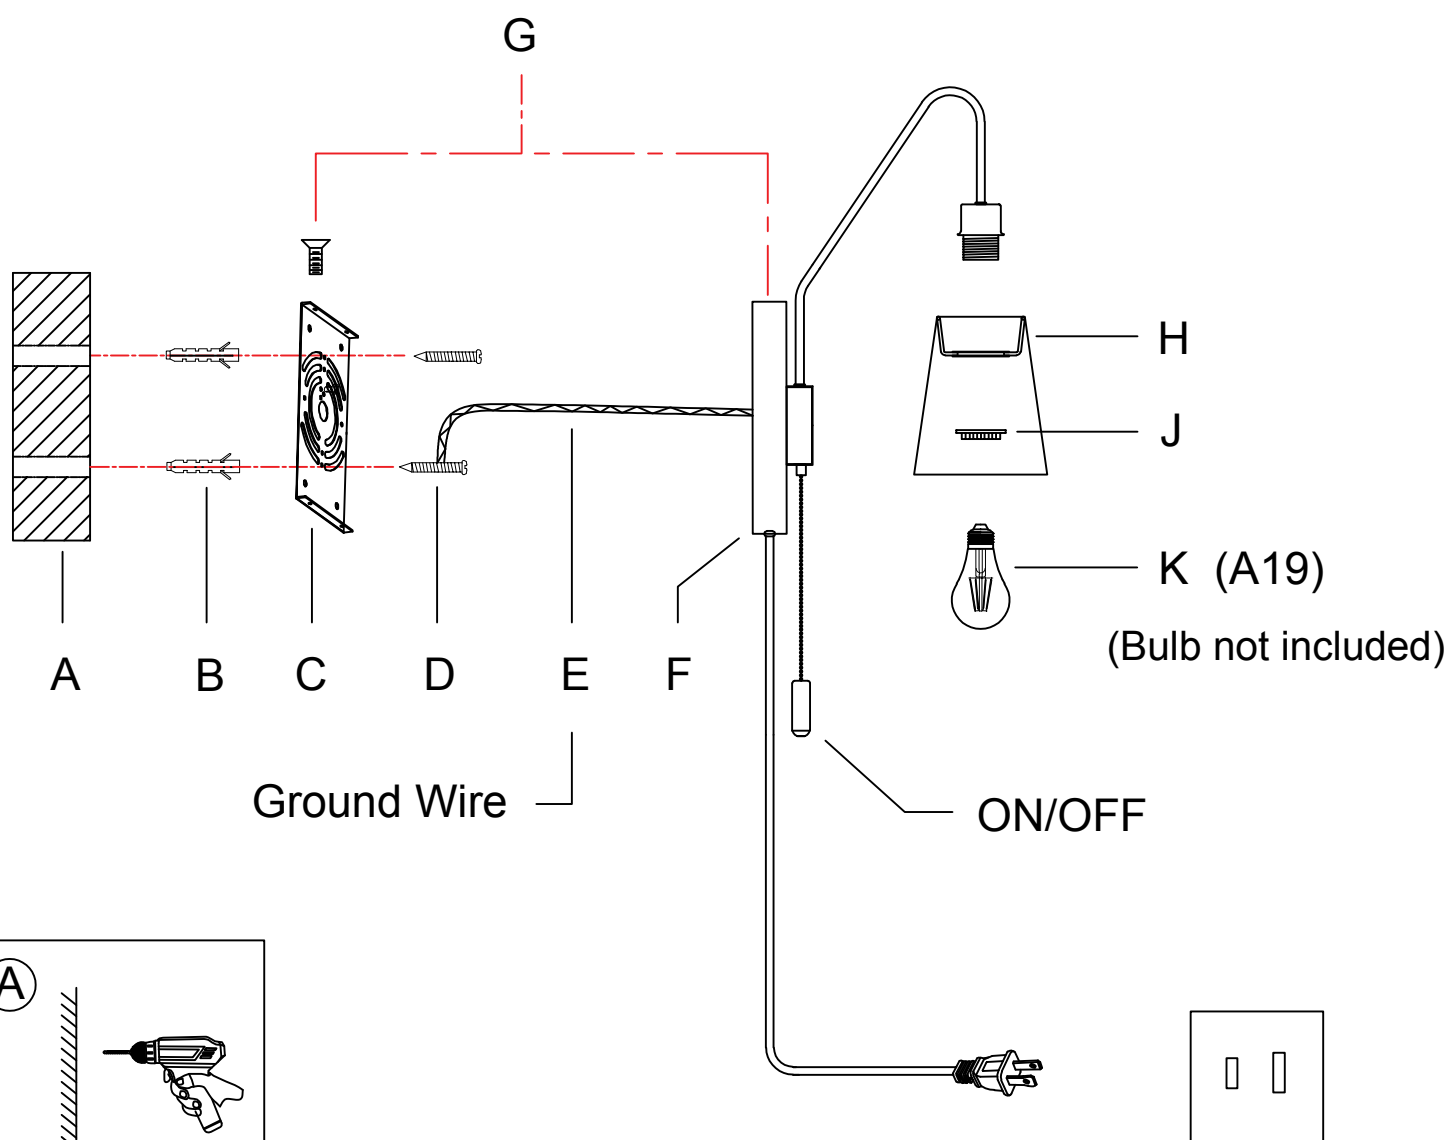

Ground Wire

ON/OFF

(Bulb not included)

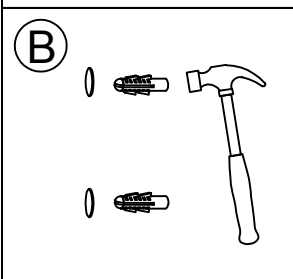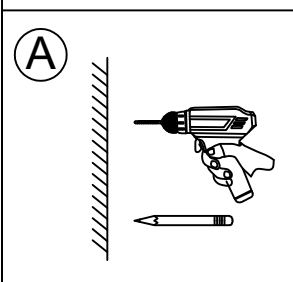

How to differ negative wire from live wire of plug-in cord  
 Live Wire: (L) Parameters Printed on Wire Cover  
 Neutral Wire: (N) Nothing Printed on Wire Cover