


# Model No: T8856BU-LM-C

Installation with Junction Box-Hardwired


## ASSEMBLY INSTRUCTIONS

1. Fix the lamp body (A) to the canopy (B) and secure with the nuts (C).
2. Wiring for the switch (D): connect the 4.72-inch short black wire from the switch with the short black wire of the light fixture and connect the 9.84-inch long black wire from the switch with the live wire.
3. Install the mounting plate (E) on the outlet box with the screws (F).
4. Connect the fixture wire to the circuit wire with the wire nuts (G): black wire from the switch with live wire, white wire from the fixture with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
5. Fix the canopy (B) to the mounting plate (E) with the screws (H).
6. Put the porous circular cover (J) and the lampshade (K) around the lampholder and secure the lampshade by screwing the socket ring (L) into the the lampholder.
7. Screw the bulb (M) into the lamp holder.

*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

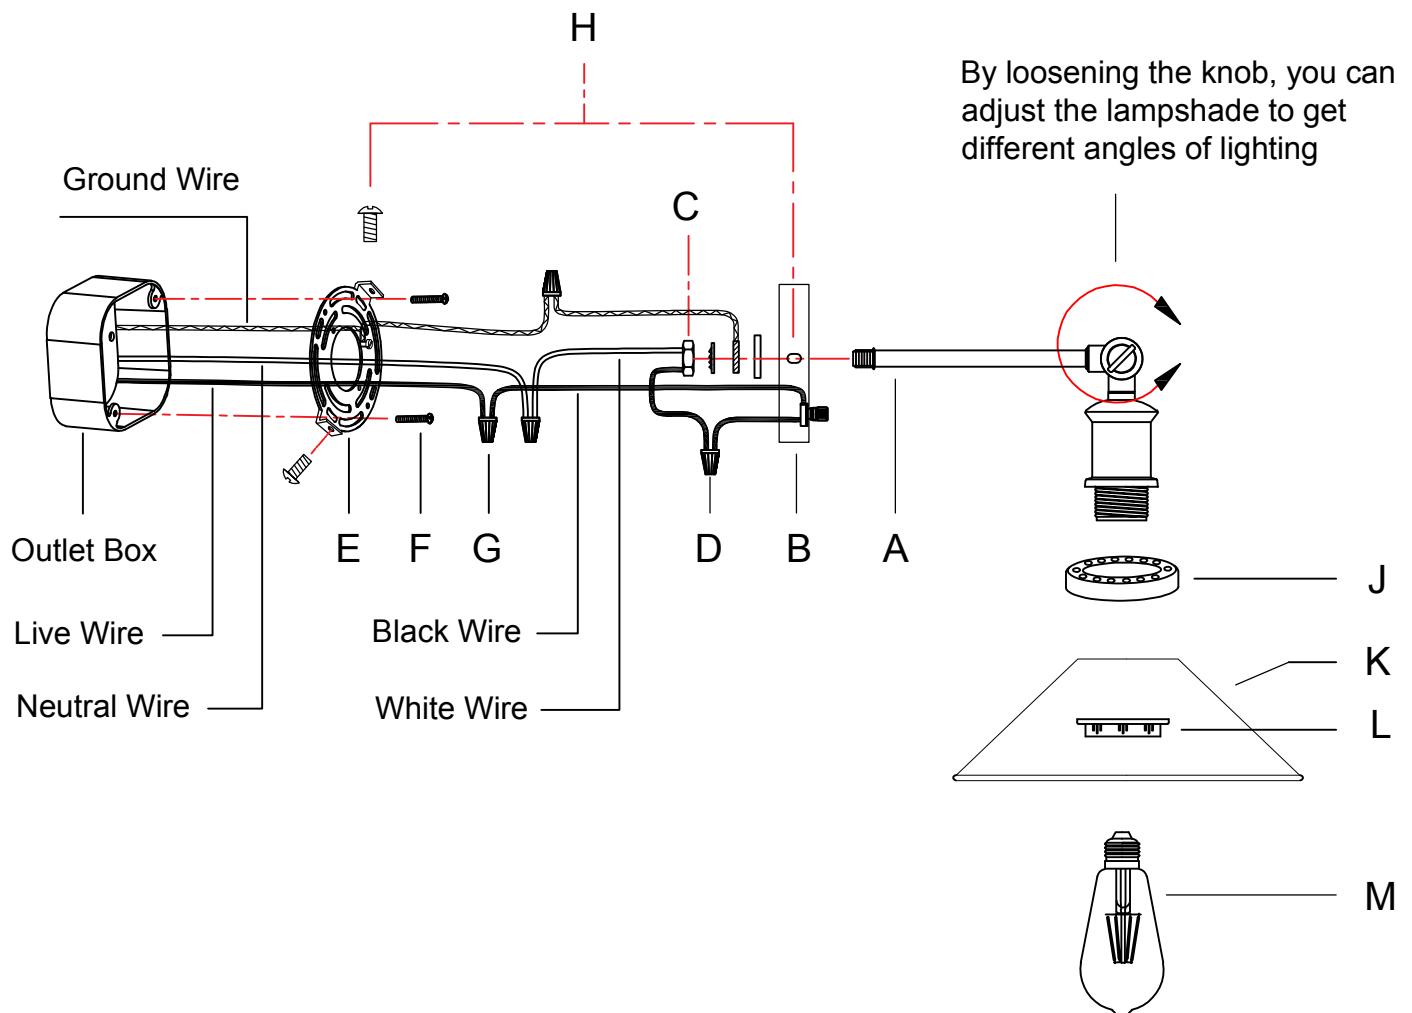

### Recommended bulb shape

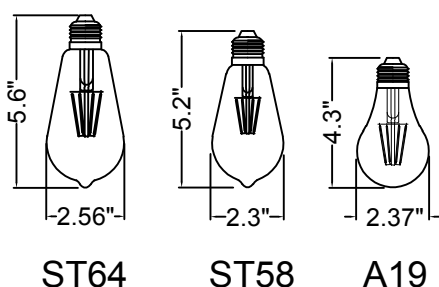

(ST64)

(Bulb not included)