


ASSEMBLY INSTRUCTIONS

1. Fix the lamp body (A) to the canopy (B) and secure with the nuts (C).
2. To connect the wires (D) from the switch: connect the black live wire from the fixture to the short black wire from the switch.
3. The plug-in cord (E): slightly twist the plug-in cord and pass the cord through the rounded hole on the bottom of the canopy and fasten the cord with an 8-shaped fastener after passing the cord through the fastener.
4. Connect the fixture wire to the plug-in cord with the wire nuts (F) and wrap the wire nuts with insulated rubber tape. Connect the live wire (L) (with parameters printed on wire cover) to the long black wire from the switch and connect the neutral wire (N) (with nothing printed on wire cover) to the white neutral wire from the fixture.
5. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (G).
6. Gently tap the plastic drywall anchors (H) into the hole with a hammer.
7. Attach the mounting plate (J) to the wall with self-tapping screws (K). Before tightening the self-tapping screws, wrap a few loops of the copper ground wire (L) around one of the screws (K), and tighten the screws to attach the ground wire to the mounting plate.
8. Fix the canopy (B) to the mounting plate (J) with the screws (M).
9. Put the porous circular cover (N) and the lampshade (O) around the lampholder and secure the lampshade by screwing the socket ring (P) into the the lampholder.
10. Screw the bulb (Q) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

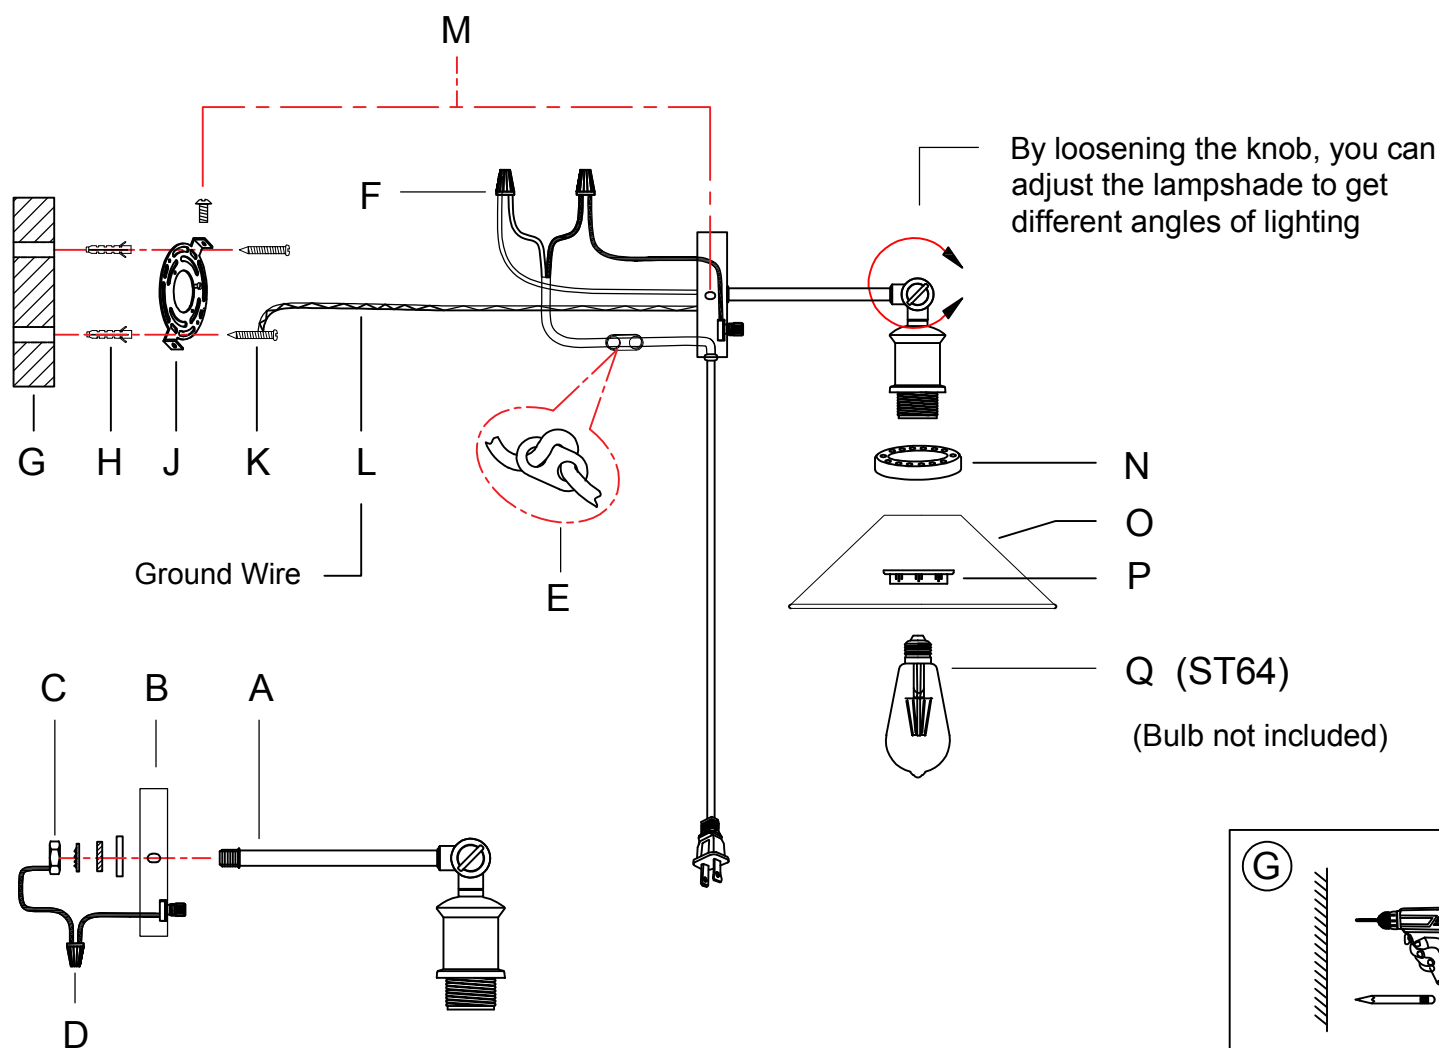

How to differ negative wire from live wire of plug-in cord

Live Wire: (L) Parameters Printed on Wire Cover

Neutral Wire: (N) Nothing Printed on Wire Cover

