


Model No: B3119BU-J-C

Installation with Junction Box-Hardwired

ASSEMBLY INSTRUCTIONS

1. Separate the wires inside the canopy one by one.
 2. Install the mounting plate (A) on the outlet box with the screws (B).
 3. Connect the fixture wire to the circuit wire with the wire nuts (C): black wire with live wire, white wire with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
 4. Fix the canopy (D) to the mounting plate (A) with the screws (E).
 5. Screw the bulb (F) into the lamp holder.
 6. Align the glass globe shade (G) with the triangular notch attached to the lamp holder and screw the lamp holder into the glass shade at an angle.
 7. Put the white metal cover (H) on top of the glass shade using the nut (J) to secure.
 8. Cover the upper part of the glass shade with the black metal shade (K) using the nut (L) to secure.
- Please consult a qualified Electrician if you are not familiar with electrical wiring.*

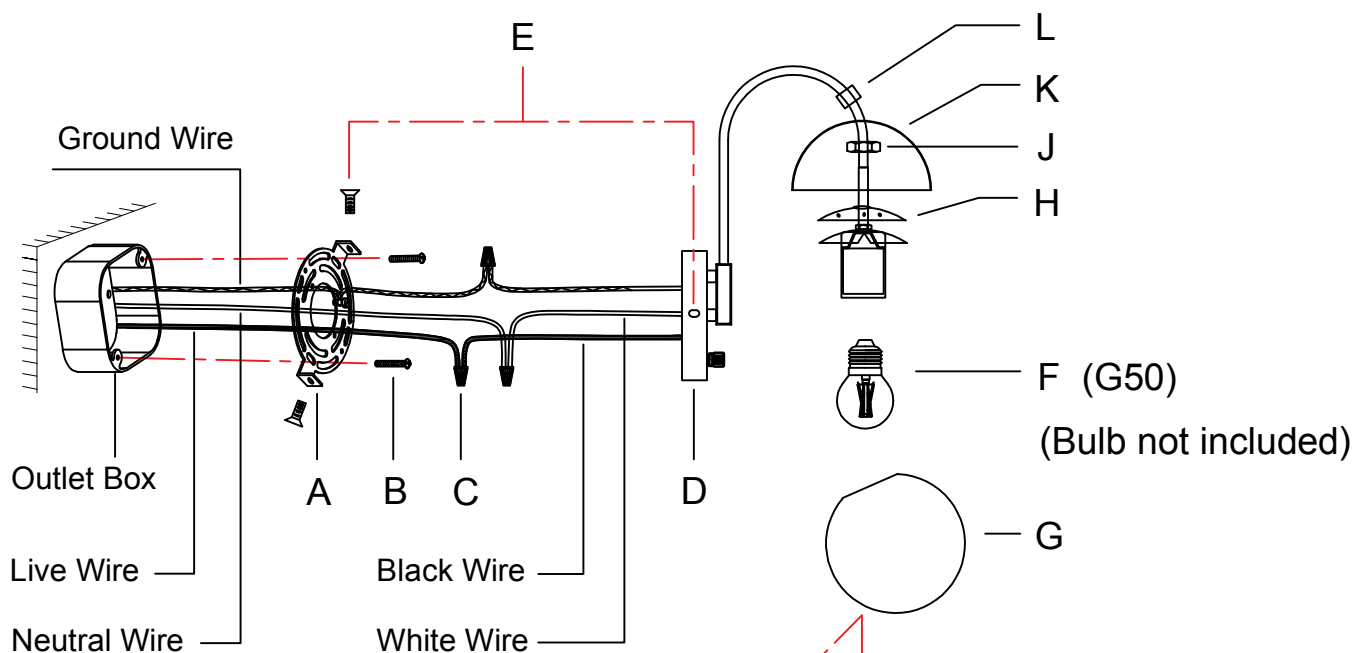

Recommended bulb shape

