


ITEM NO. :B3119BU-J-C

Installation Process Without a Junction Box

ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Attach the the mounting plate (C) to the wall and secure it with self-tapping screws (D).
4. Pass the power cords (E) through the hole on the canopy, adjust the length of cords, and fasten the cords with an 8-shaped fastener.
5. Connecting the power cords (F): black wire with live wire (L), white wire with neutral wire(N). Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
6. Wrap a few loops of the ground wire (G) around the green screw on the mounting plate (C) and then tighten the green screw.
7. Fix the canopy (H) to the mounting plate (C) with the screws (J).
8. Screw the bulb (K) into the lamp holder.
9. Align the glass globe shade (L) with the triangular notch attached to the lamp holder and screw the lamp holder into the glass shade at an angle.
10. Put the white metal cover (M) on top of the glass shade using the nut (N) to secure.
11. Cover the upper part of the glass shade with the black metal shade (O) using the nut (P) to secure.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

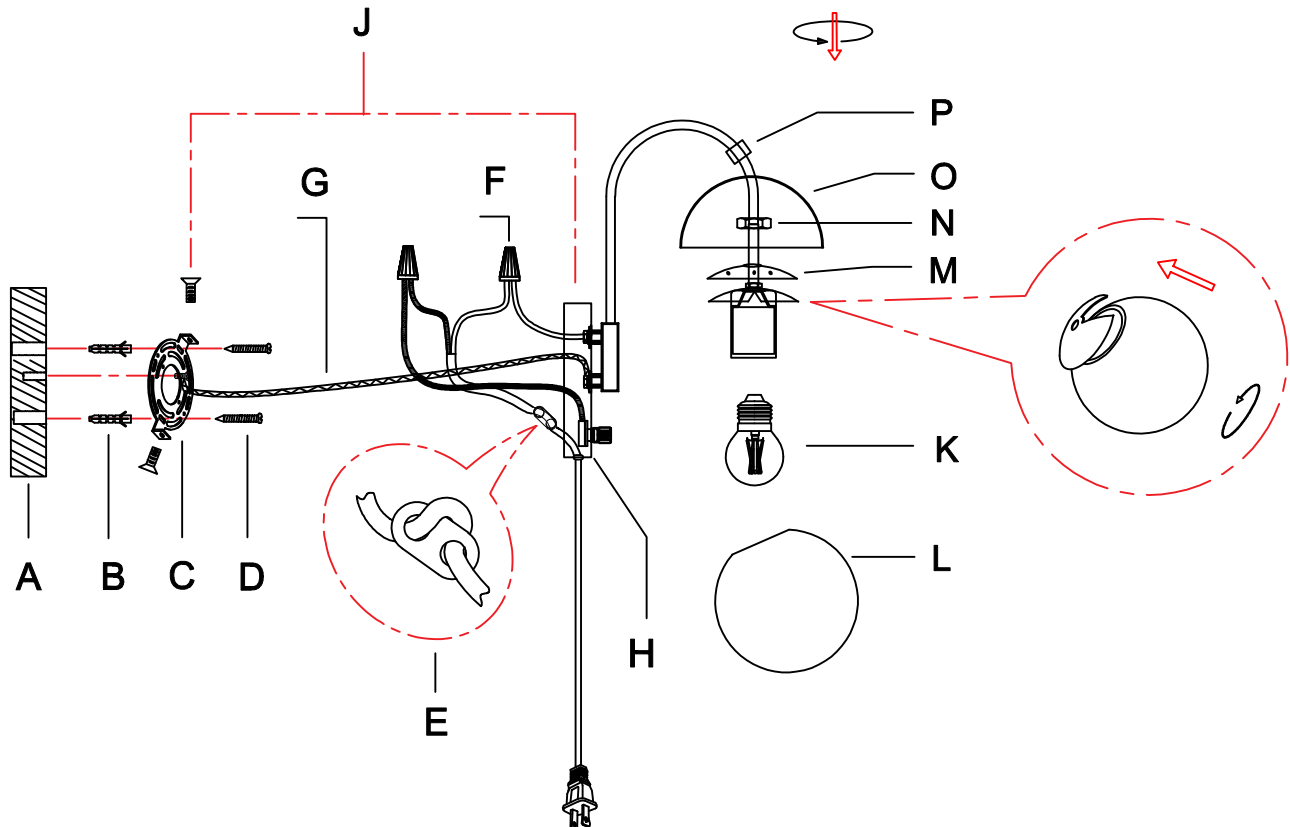

Note: The way to differ the neutral wire from the live wire is that a white line is printed on the cover of the neutral wire .