ITEM NO. :T3317BU

ASSEMBLY INSTRUCTIONS

1.Attach the aluminum rod (A) to the canopy (E) using the screw to secure.

2.Install the mounting plate (B) on the outlet box with the screws (C).

3.Connect the fixture wire to the circuit wire with the wire nuts (D): black wire with live wire, white wire with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.

4.Fix the canopy (E) to the mounting plate (B) with the screws (F).
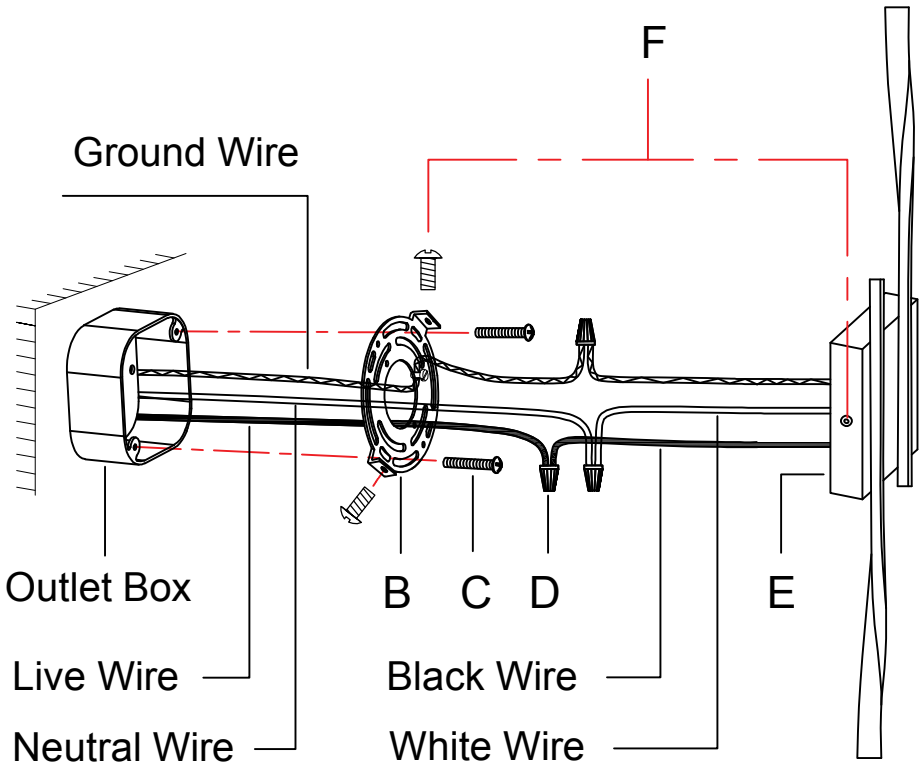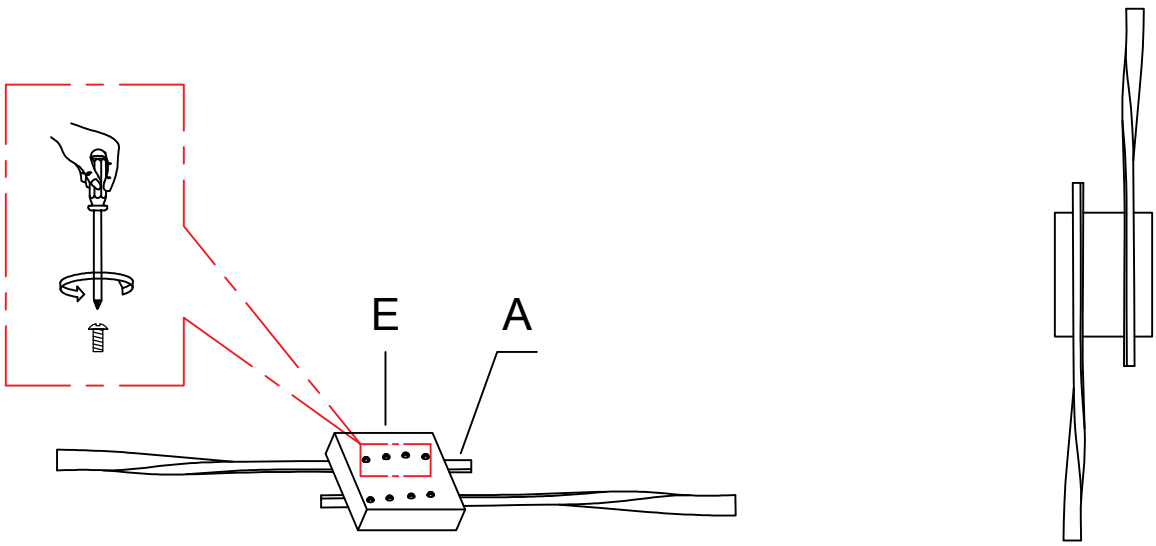
Please consult a qualified Electrician if you are not familiar with electrical wiring.